





















Service Schedule

SERVICE SCHEDULE

| Service | Interval [Kilometres/miles/years] |
|---------|--------------------------------------|
| 1 = | 15 000/10 000/1 |
| 2 = | 30 000/20 000/2 |
| 3 = | 45 000/30 000/3 |
| 4 = | 60 000/40 000/4 |
| etc. | |

| Operation | | Service | | | | | | | | |
|-----------|---|--------------------------------|---|---|---|---|---|---|---|---|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | |
| 1 | Coolant level, anti-freeze: check, correct | X | X | X | X | X | X | X | X |  |
| 2 | Drive belt: check condition | X | X | X | X | X | X | X | X |  |
| 3 | Engine oil and oil filter: change | X | X | X | X | X | X | X | X |  |
| 4 | Windscreen wash/wipe systems: check, top-up | X | X | X | X | X | X | X | X |  |
| 5 | Brake fluid level: check, correct | X | X | X | X | X | X | X | X |  |
| 6 | Lighting and signalling equipment: check | X | X | X | X | X | X | X | X |  |
| 7 | Headlamp aiming (incl. additional lights): check, correct | X | X | X | X | X | X | X | X |  |
| 8 | Engine and transmission: check visually for leaks | X | X | X | X | X | X | X | X |  |
| 9 | Front/rear suspension steering, all sealing bellows: check | X | X | X | X | X | X | X | X |  |
| 10 | Brake lines, fuel lines, exhaust system: visual check | X | X | X | X | X | X | X | X |  |
| 11 | Front/rear disc brakes: visual check | X | X | X | X | X | X | X | X |  |
| 12 | Wheel attachment, tyre condition, pressures: check, correct | X | X | X | X | X | X | X | X |  |
| 13 | Parking brake: check, adjust | X | X | X | X | X | X | X | X |  |
| 14 | Spark plugs: replace - Delphi | Every 60 000 km/40 000 miles | | | | | | | |  |
| | - Bosch | Every 120 000 km/80 000 miles | | | | | | | | |
| 15 | Fuel filter: replace | Every 150 000 km/100 000 miles | | | | | | | |  |
| 16 | Air cleaner element: replace | Every 3 years or every 45 | | | | | | | | |

| | | | |
|----|---|---|---|
| | | 000 km/30 000 miles whichever occurs first |  |
| 17 | Timing belt and tension roller: replace - only 2.0 Turbo (Z 20 LET) | Every 4 years or every 60 000 km/40 000 miles whichever occurs first |  |
| 18 | Brake fluid: replace | Every 3 years |  |
| 19 | Remote control batteries: change | Every 2 years |  |
| 20 | Test drive incl. brake efficiency check, final inspection | X X X X X X X X |  |