


Exterior Rear View Mirror

The exterior rear view mirrors are adjusted by manipulating the mirror housing. A spring mechanism allows the mirror to move backwards or forwards to prevent accidental damage.

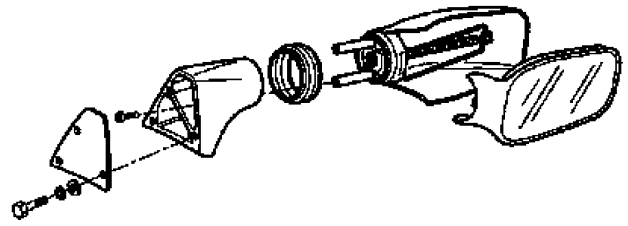

T 8725