

Antenna, Remove and Install



Remove

Hard top or soft top from vehicle – see Owner's Manual.

Rear header panel from vehicle – see operation "Rear Header Panel, Remove and Install" in group A.

Antenna from rear header panel – nut, washer.




Install

Antenna to rear header panel – washer, nut.

Rear header panel to vehicle.

Hard top or soft top to vehicle.

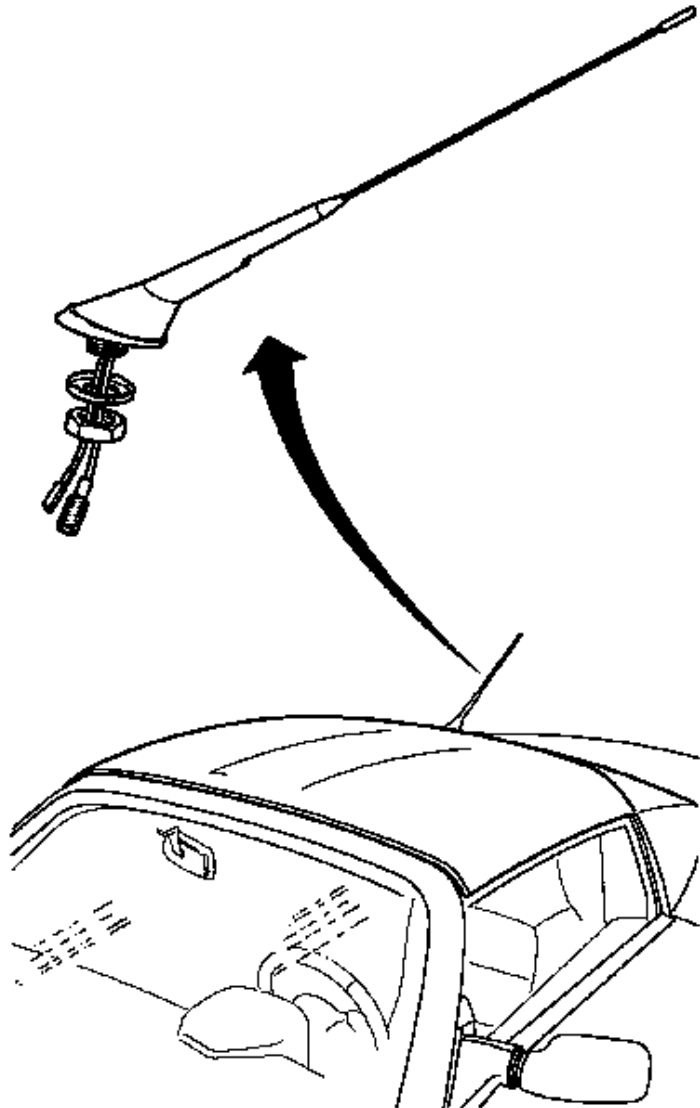

T 9644