

## **Brake Fluid Reservoir**

The brake fluid reservoir is inserted in the top of the master cylinder. A fluid supply is also provided from the brake fluid reservoir to the clutch master cylinder.

A float switch monitors the level of the brake fluid in the reservoir and is connected to a telltale in the instrument panel.

- **Service**

The brake fluid must conform to the standard DOT4.

The brake fluid must be changed every 3 years.