

Wheel Speed Sensors and Rings

The wheel speed sensors are mounted in the hub carriers. The sensor rings are mounted on the drive shafts and the front wheel hub.