

Driveshaft Seal Rings, Replace



Remove

Driveshaft from transmission – see operation "Driveshaft, Remove and Install" in group F.

Seal ring from transmission housing – use **MKM-557-1** (2) and **MKM-557-2** (1).

Coat new seal ring with transmission fluid.



Install



New seal ring – drive in with **KM-519** (3) until flush with transmission housing.

Driveshaft to transmission.



Inspect

Level of transmission fluid and correct if necessary – see operation "Transmission Fluid Level, Check and Correct".

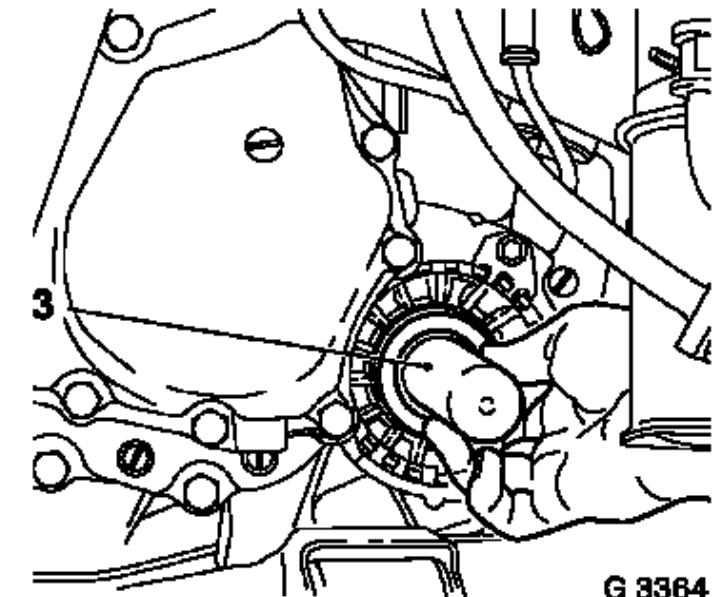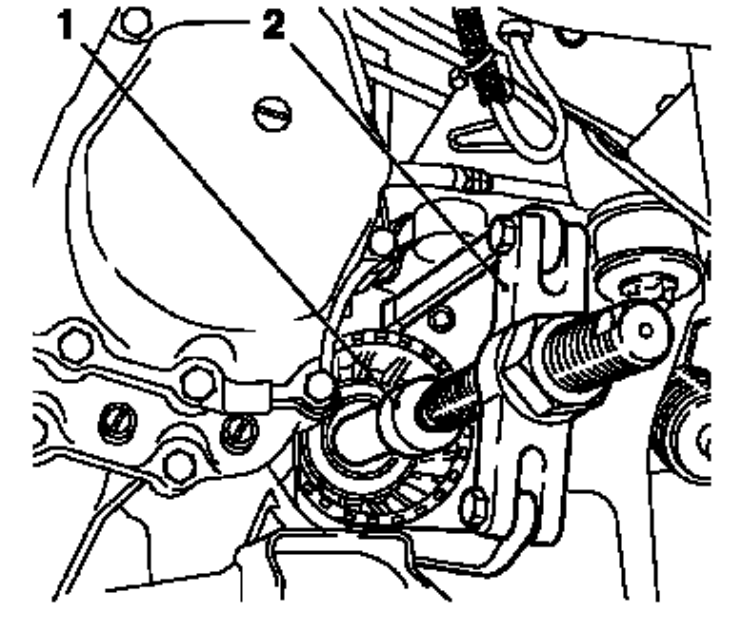

G 3364