

Movement Sensor, Anti-Theft, Remove and Install




Remove

Seats and seat belts.

Rear trim panel from rear bulkhead.

Harness connector from movement sensor.

Movement sensor from rear bulkhead.

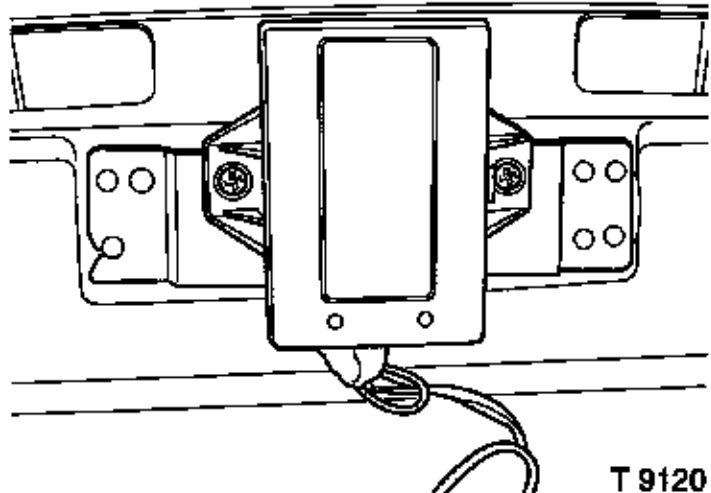

Install

Movement sensor to rear bulkhead.

Harness connector to movement sensor.

Rear trim panel to rear bulkhead.

Seats and seat belts.