


Oil Pump

The oil pump is a trochoidal type and is mounted on the rear of the timing case cover. The inner rotor of the oil pump is mounted on the crankshaft.

The pressure relief valve is located in the front of the timing case cover.

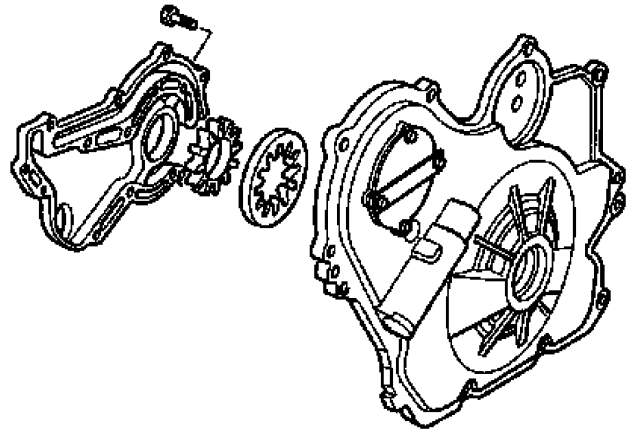

T 9035