

Throttle Valve Position Sensor

The throttle valve position sensor consists of a potentiometer, which is connected to the throttle shaft and produces an output voltage that is directly proportional to the size of the throttle opening.

This output voltage is applied to the engine control unit for use in calculating the quantity of fuel to be delivered.

