

Compression Pressure, Check

Engine at operating temperature (minimum oil temperature **80 °C**).



Remove

Direct ignition module – see operation "Direct Ignition Module, Remove and Install".

Use **KM-194-E** spark plugs.

Fuel pump relay from luggage compartment.



Inspect

Use a compression pressure recorder with a rubber cone and a measuring range up to **40 bar**.

Operate the starter for approx. 4 seconds with the throttle valve wide open – minimum engine speed **300 rpm**.

Max. pressure difference between cylinders: **1 bar (14.7 psi)**.



Install

Fuel pump relay

Use **KM-194-E, 25 Nm** spark plugs.

Direct ignition module.