

Oil Filter, Replace



Remove

Oil filter cover (1) from the oil filter housing with **KM-6150**.


Oil filter element from the housing.



Install

Oil filter element into the housing.

Oil filter cover (1) to the oil filter housing with a new gasket – **25 Nm**.

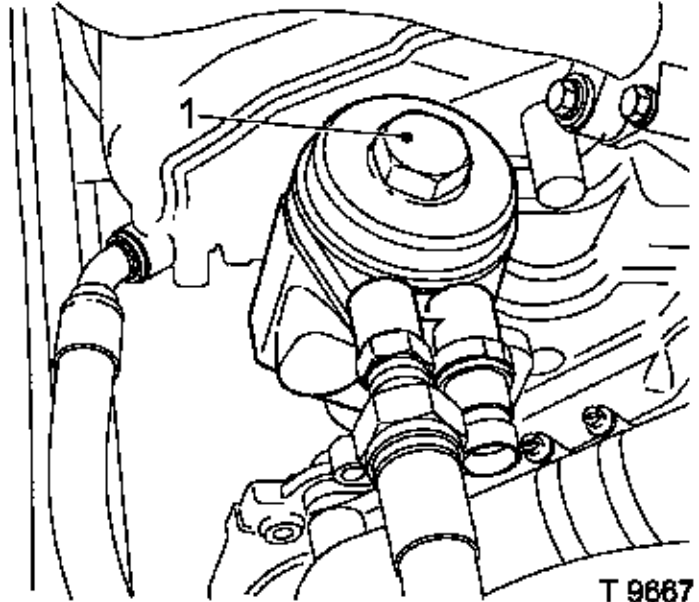

T 9667