

Oil Pressure Switch, Remove and Install



Remove

Wiring harness connector from the oil pressure switch (1).


Oil pressure switch (1) from the oil filter housing.



Install

Oil pressure switch (1) to the oil filter housing – **18 Nm**.

Wiring harness connector to the oil pressure switch (1).

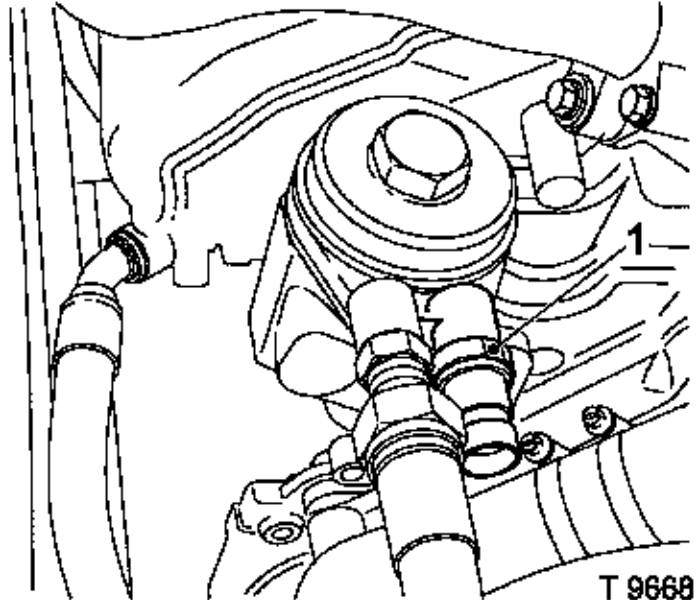

T 9668