


Oil Cooler, Remove and Install




Remove

Air cleaner – see operation "Air Cleaner, Remove and Install".

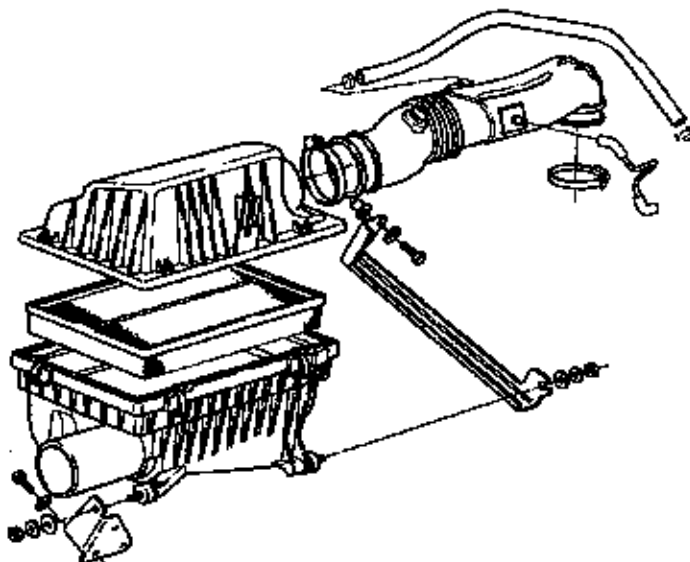


T 9595

Expansion tank (1) from the bracket – bolts.

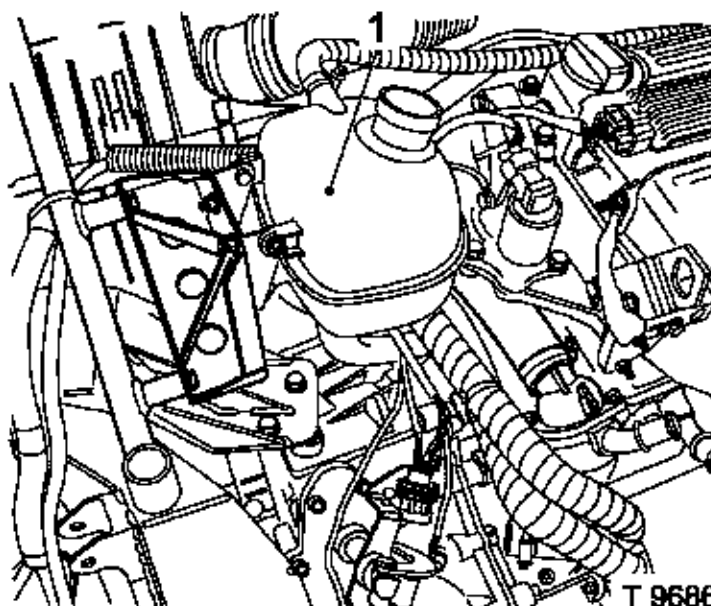

T 9686

Oil pipe (1) from the oil filter housing.

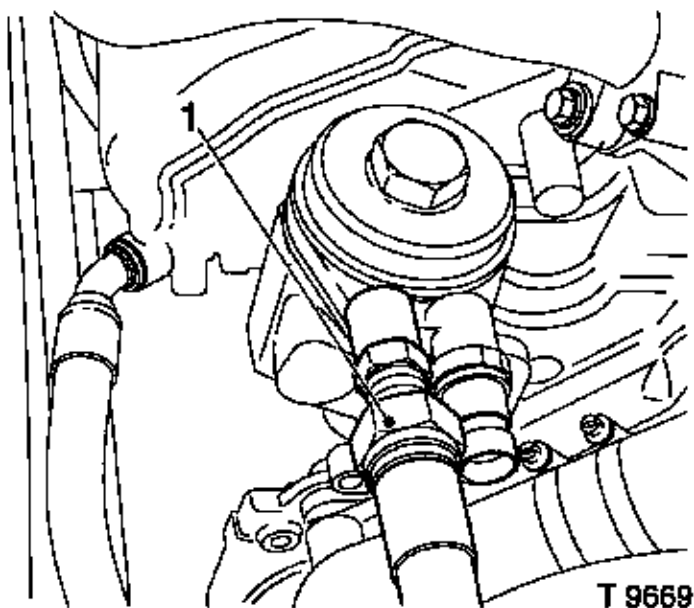


Wiring harness from the oil cooler.

Coolant hoses from the oil cooler.

Oil lines from the oil cooler.

Oil cooler.

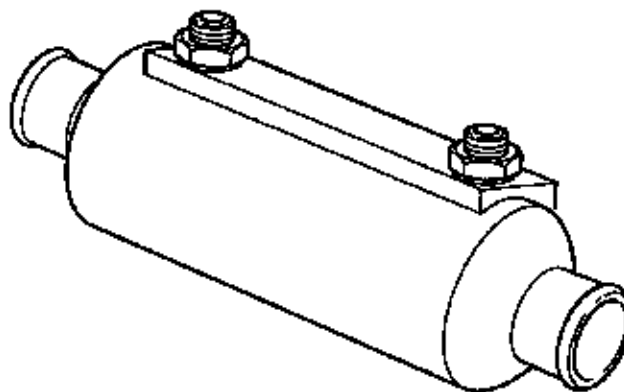

T 9718



Install


Oil cooler.

Oil lines to the oil cooler.


Coolant hoses to the oil cooler.

Wiring harness to the oil cooler.

Oil pipe (1) to the oil filter housing.

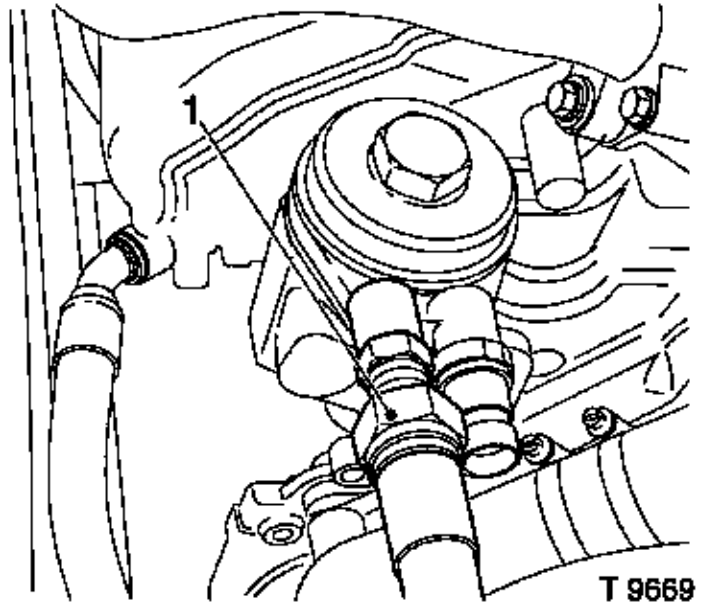


Expansion tank (1) to the bracket – bolts.

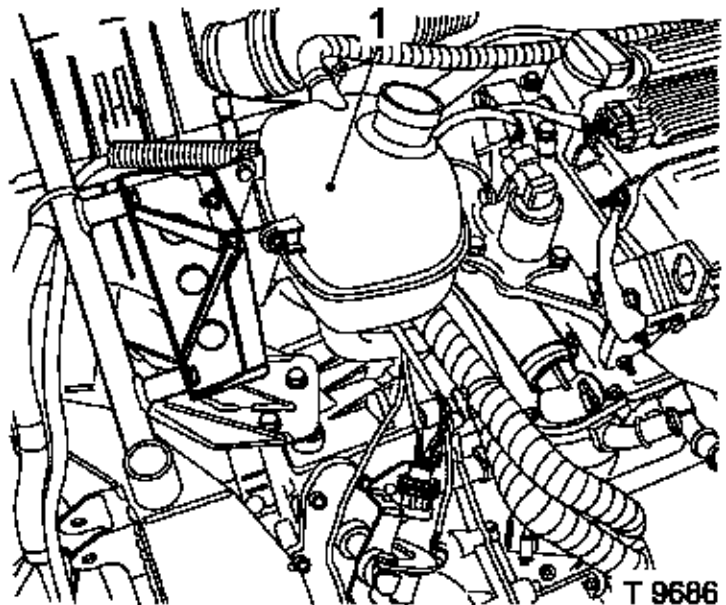

Air cleaner – see operation "Air Cleaner, Remove and Install".

Fill up and bleed the cooling system – see operation "Cooling System, Drain, Fill and Bleed".

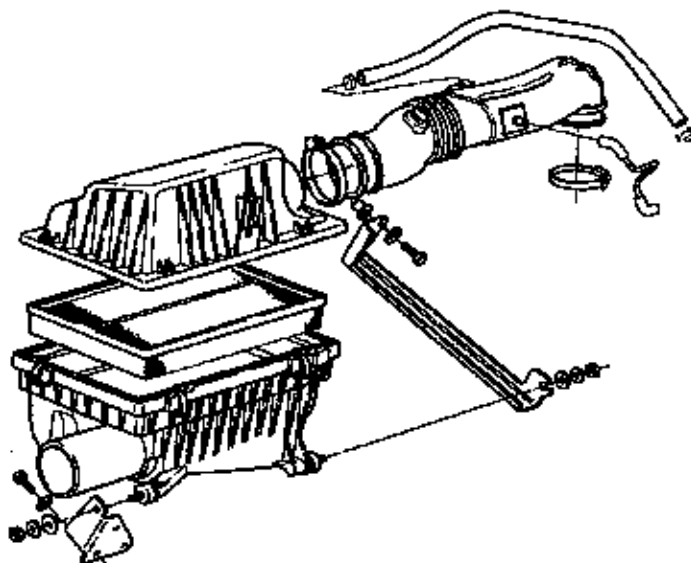

T 9595