## **Coolant Temperature of Closed System, Measure**



Instal

Test adapter into heater hose.



Measure

Coolant temperature.



Remove

Test adapter from heater hose.

Fill up with coolant.