

Thermostat, Remove and Install



Remove

Wiring harness connector from thermostat cover.

Thermostat cover from the thermostat housing
– 2 bolts (arrow).

Thermostat from the housing.




Install

Thermostat and O-ring in the housing.

Thermostat cover to the thermostat housing –
2 bolts (arrow) **10 Nm**.

Wiring harness connector to the thermostat
cover.

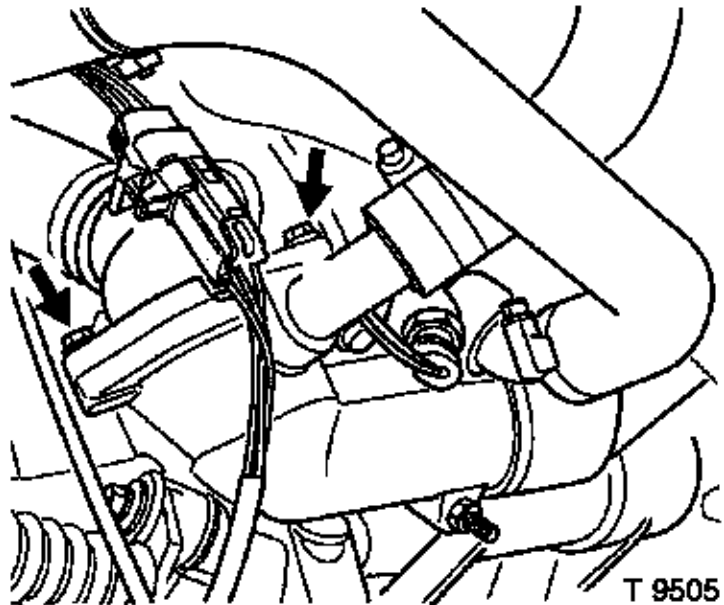

T 9505