

Ribbed V-belt Tensioner, Remove and Install



Remove

Ribbed V-belt – see operation "Ribbed V-belt, Remove and Install".


Ribbed V-belt tensioner (1) – bolt.



Install

Ribbed V-belt tensioner (1) – bolt **45 Nm**.

Ribbed V-belt

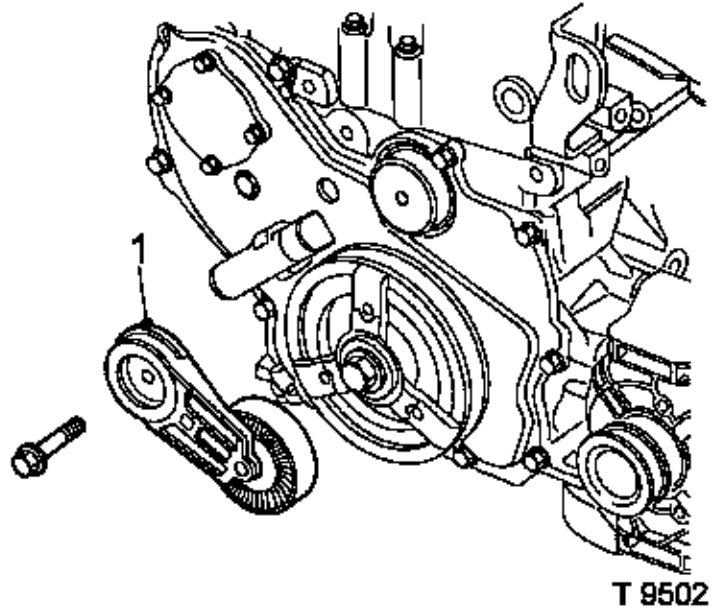

T 9502