

Coolant Temperature Sensor, Remove and Install



Remove

Wiring harness connector from the coolant temperature sensor (1).


Coolant temperature sensor (1) from the thermostat housing.



Install

Coolant temperature sensor (1) in the thermostat housing – **20 Nm**.

Wiring harness connector to the coolant temperature sensor (1).

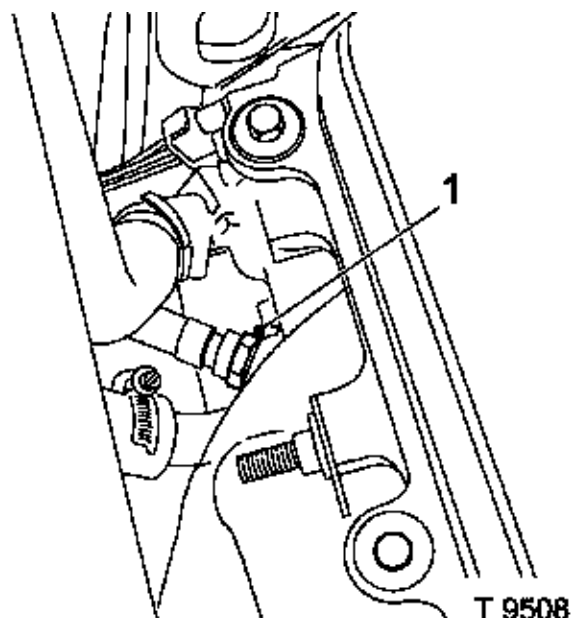

Inspect

Ensure that the coolant level in the reservoir is at the MAX mark.

Add fluid if required.