

Knock Control Sensor, Remove and Install



Remove

Starter motor – see operation "Starter Motor, Remove and Install".

Wiring harness connector from the knock control sensor (1).

Knock control sensor (1) from the engine – bolt.




Install

Knock control sensor (1) to the engine – bolt **25 Nm**.

Wiring harness connector to the knock control sensor (1).

Starter motor

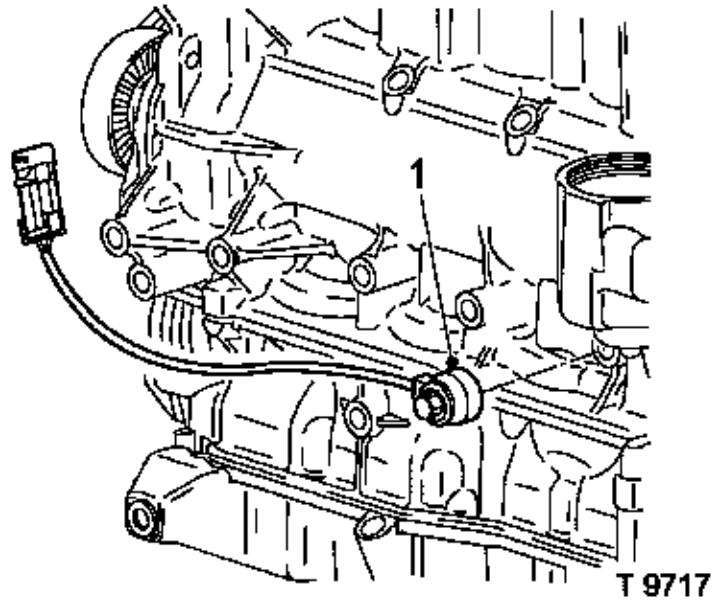

T 9717