


## Hub Carrier, Replace



### Remove


Wheel bearing assembly from hub carrier – see operation "Wheel Bearing Assembly, Remove and Install".

Lower wishbone from hub carrier – nut (1); use suitable ball joint remover.

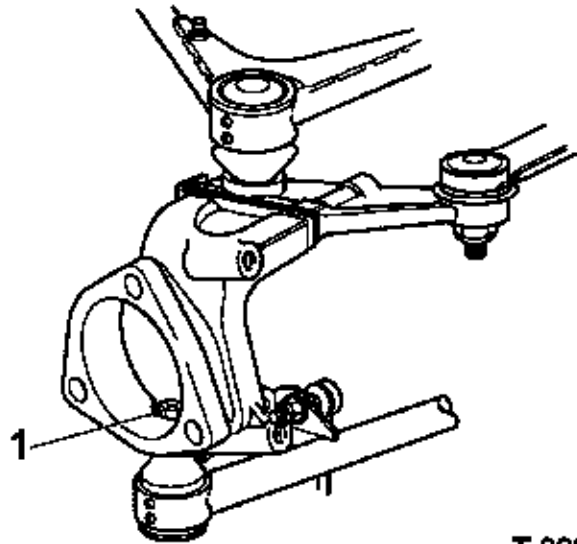

T 8997

Hub carrier from steering arm – bolts; retain camber shims.

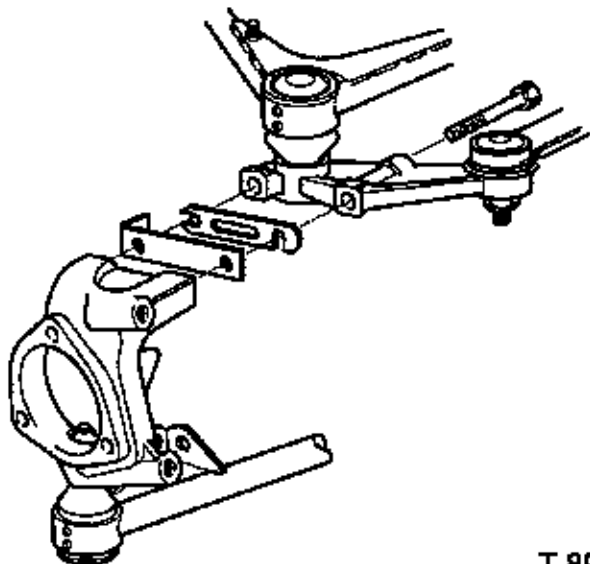


T 8998



### Install


Hub carrier to steering arm – shims, bolts **45 Nm**.

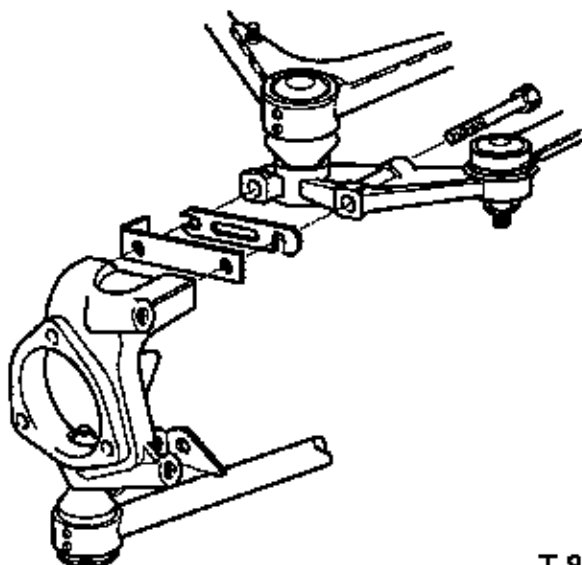

T 8998

Lower wishbone to hub carrier – nut (1) **45 Nm.**

Wheel bearing assembly to hub carrier – see operation "Wheel Bearing Assembly, Remove and Install".

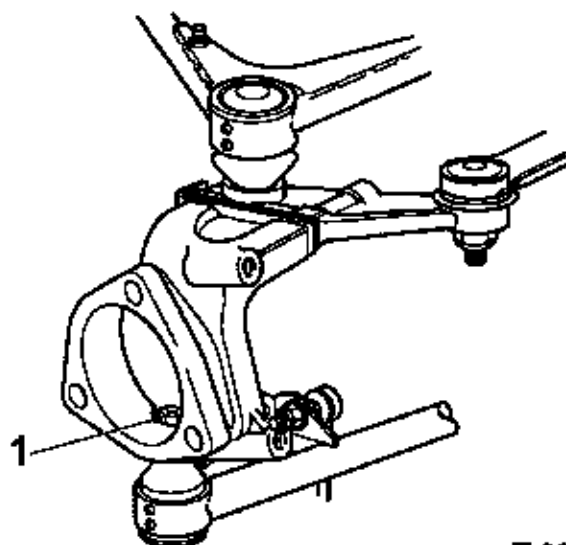

T 8997