

## Suspension Spring, Remove and Install



### Remove

Shock absorber from front suspension – see operation "Shock Absorber, Remove and Install".



### Disassemble

Suspension spring from shock absorber – use suitable spring compressor, release retaining circlip for spring collar from upper groove.



### Assemble

Suspension spring to shock absorber – use suitable spring compressor, install retaining circlip for spring collar in upper groove.



### Install

Shock absorber to front suspension.