

Fuel Pressure, Check

Warning!

Fuel may escape – observe the safety regulations and relevant national legislation.



Install

Fuel pressure test gauge **KM-J-34730-91** to test connection (1).

Start the engine and bleed the fuel pressure test gauge. Collect any escaping fuel in a suitable container.



Inspect

Fuel pressure. Start the engine and run at idling speed.



Remove

Fuel pressure test gauge from test connection (1).

