

Heater Unit

The heater unit is mounted in the front compartment of the vehicle.