## **Glassfibre-composite Structures (Bolted)**

## **Front Bonnet**

The front bonnet is attached to the body by means of a single hinge at the front edge. The bonnet lock is operated by means of a cable.

Two grilles are installed in the front bonnet for the passage of air from the radiator (see Section 2.5.1 "Radiator Grilles").

