

## Front Bonnet Hinge, Replace



Remove

Front bonnet – see operation "Front Bonnet, Remove and Install".

Front clamshell – see operation "Front Clamshell, Remove and Install".

Front bonnet hinge from radiator case – 3 bolts (2) on each side from nuts (1).



Install

Front bonnet hinge to radiator case – 3 bolts (2) on each side to nuts (1) – **20 Nm**.

Clamshell

Front bonnet

