Roll Bar Cover, Remove and Install



Remove

Soft top or hard top – see Owner's Manual.


Roll bar cover (1) - 3 screws and 3 spacers (2), 3 nuts and washers.


Important: Note arrangement of all washers.

Do not lose spacers (2).

Do not drop washers into engine compartment.

Weatherstrip from roll bar cover.

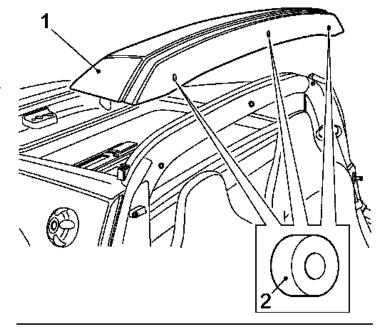

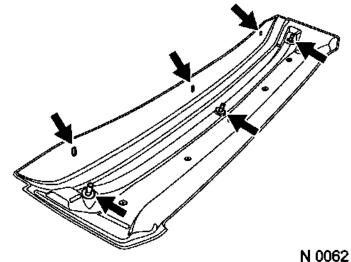



Roll bar cover (1) - 3 screws and 3 spacers (2), 3 nuts and washers.

Weatherstrip to roll bar cover.

Important: Install washers in arrangement noted on removal.



Soft top or hard top – see Owner's Manual.

