


Front Bonnet Hinge, Adjust



Adjust

1. Remove front bonnet – see operation "Front Bonnet, Remove and Install".
2. Remove front clamshell – see operation "Front Clamshell, Remove and Install".
3. Release hinge from radiator case
 - Mark alignment markings on hinge and radiator case
 - Slacken 3 nuts (1), 3 screws (2)
 - Adjust hinge
 - Tighten 3 screws (2), 3 nuts (1)

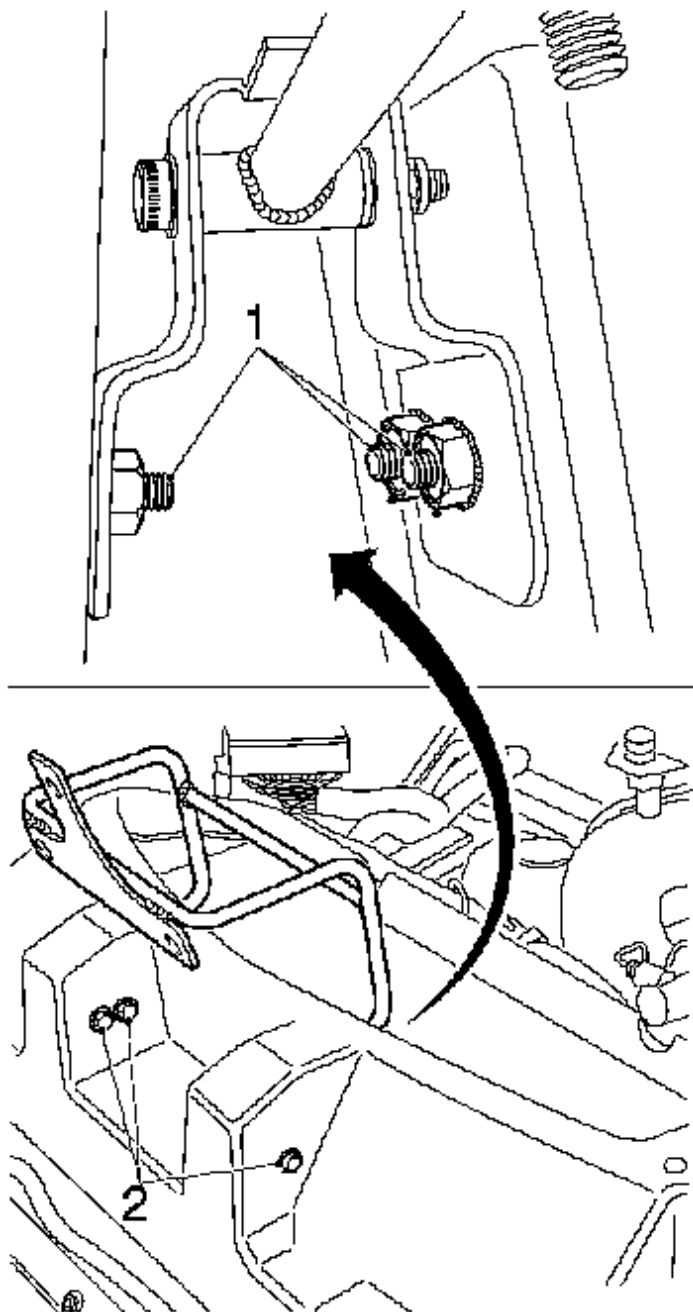

S 0002502

4. Install front clamshell – see operation "Front Clamshell, Remove and Install".
5. Install front bonnet – see operation "Front Bonnet, Remove and Install".