

Systems

ABS	Anti-lock Brake System	RADIO	Radio
-----	------------------------	-------	-------

Components

A2	Control unit - Anti-lock Brake System	B36	Loudspeaker - Front, left
A14	Radio	B37	Loudspeaker - Front, right
B25	Sensor - Wheel speed, front, left	B38	Loudspeaker - Rear, left
B26	Sensor - Wheel speed, front, right	B39	Loudspeaker - Rear, right
B27	Sensor - Wheel speed, rear, left	W6	Antenna - Radio
B28	Sensor - Wheel speed, rear, right		

Connectors

X12	Main harness & Roll hoop	X40	Main harness & Roll hoop
-----	--------------------------	-----	--------------------------

Grounding Points

1	Chassis front	2	Battery
---	---------------	---	---------

Abbreviations

5A	5 Ampere	FB16	Fuse FB16
10A	10 Ampere	FB22	Fuse FB22
15	Ignition voltage	FL3	Main fuse FL3
20A	20 Ampere	INS	Instrument
30	Constant voltage	SBL	Switch - Reversing lamp
60A	60A	SLS	Stop lamp switch
DIAG	Diagnostic link	WEG	Vehicle speed signal
EMP	Radio	Z20LET	Engine Z20LET
FB7	Fuse FB7	Z22SE	Engine Z22SE
FB15	Fuse FB15		

Color codes

BK	Black	GY	Gray
BK/GY	Black / Gray	PK	Pink
BK/WH	Black / White	RD	Red
BK/YE	Black / Yellow	RD/BK	Red / Black
BN	Brown	VT	Violet
BN/BU	Brown / Blue	VT/OG	Violet / Orange

BU	Blue	VT/YE	Violet / Yellow
GN	Green	YE	Yellow
GN/BN	Green / Brown	YE/GY	Yellow / Gray
GN/VT	Green / Violet		