


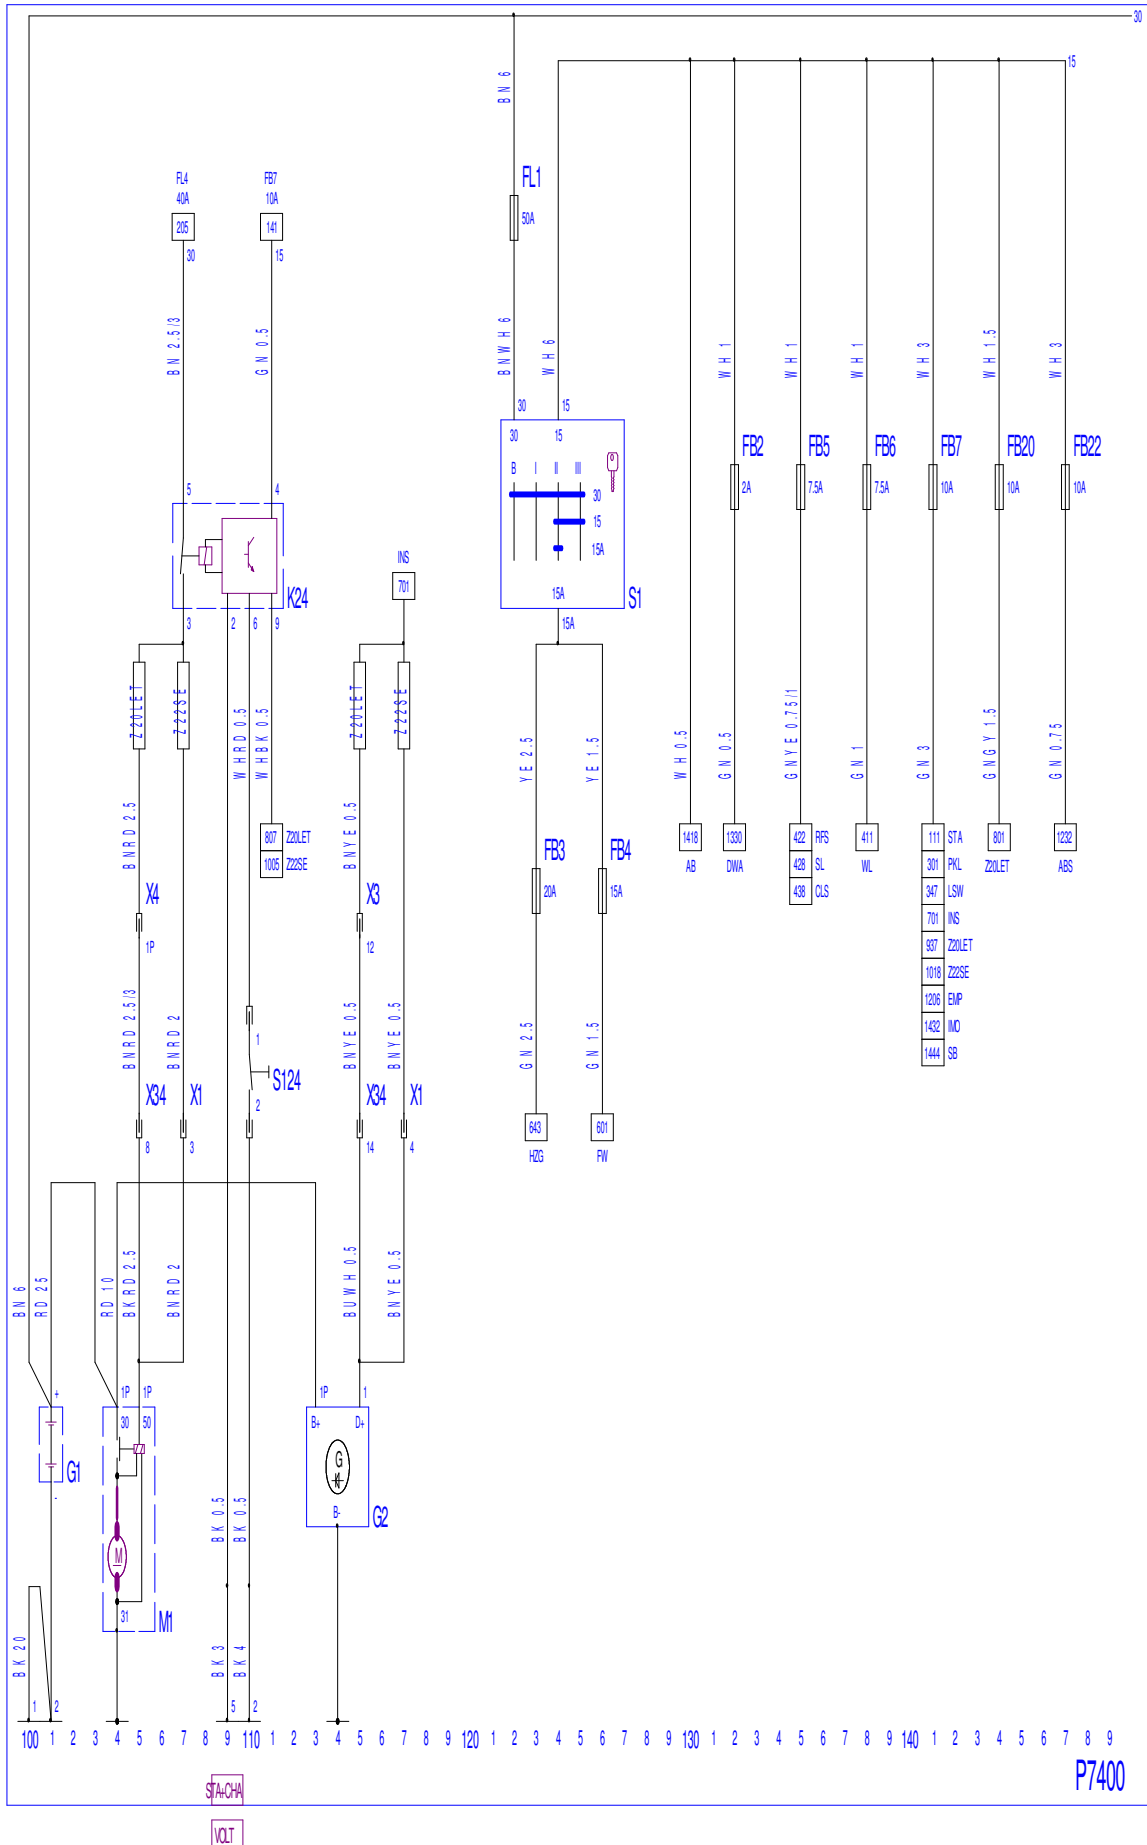

Speedster/VX220, model year 2003



Systems

STA+CHA Start & Charging VOLT Voltage distribution

Components

FB2	Fuse	FL1	Main fuse
FB3	Fuse	G1	Battery
FB4	Fuse	G2	Alternator
FB5	Fuse	K24	Relay - Starter
FB6	Fuse	M1	Starter
FB7	Fuse	S1	Switch - Starter
FB20	Fuse	S124	Switch - Starter button
FB22	Fuse		

Connectors

X1	Main harness & Battery positive	X4	Main harness & Extension harness, engine
X3	Main harness & Extension harness, engine	X34	Extension harness, engine & Battery positive

Grounding Points

1	Chassis front	5	Chassis rear
2	Battery		

Abbreviations

10A	10 Ampere	HZG	Heating
15	Ignition voltage	IMO	Immobiliser
30	Constant voltage	INS	Instrument
40A	40 Ampere	LSW	Light switch
AB	Airbag	PKL	Parking lamps
ABS	Anti-lock Brake System	RFS	Reversing lamps
CLS	Clutch switch	SB	Seat belt switch
DWA	Anti-theft warning system	SL	Stop lamps
EMP	Radio	STA	Start & Charging
FB7	Fuse FB7	WL	Hazard warning lamps
FL4	Main fuse FL4	Z20LET	Engine Z20LET
FW	Windscreen wiper	Z22SE	Engine Z22SE

Color codes

BK	Black	GN/GY	Green / Gray
BK/RD	Black / Red	GN/YE	Green / Yellow
BN	Brown	RD	Red
BN/RD	Brown / Red	WH	White
BN/WH	Brown / White	WH/BK	White / Black
BN/YE	Brown / Yellow	WH/RD	White / Red
BU/WH	Blue / White	YE	Yellow
GN	Green		