

Components

FR1	Fuse	K16	Relay - Fuel pump
FR2	Fuse	K18	Relay - Engine control unit
FR3	Fuse	K24	Relay - Starter
FR4	Fuse	K82	Relay - Pump, coolant additional