

Glass, External Rear-view Mirror, Replace




Remove

Glass from exterior rear-view mirror – carefully prise off around periphery of glass to release from clips.



Install

Glass to exterior rear-view mirror – press glass into housing to engage in clips.

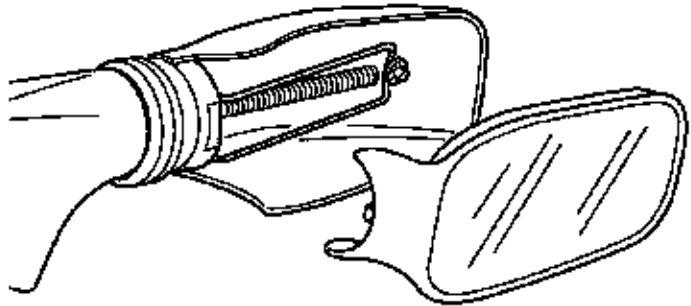

T 9640