

External Rear-view Mirror Assembly, Remove and Install




Remove

Rear-view mirror assembly from door – bolts, washers, gasket.



Install

Rear-view mirror assembly to door – gasket, bolts, washers.

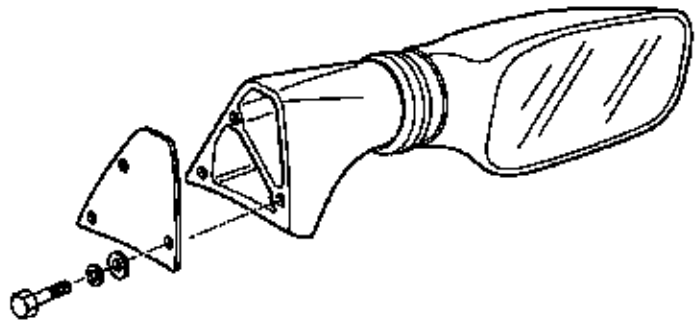

T 9641