

Licence Plates

Caution !

Due to the weight distribution of the vehicle it is specifically recommended that all work carried out under the vehicle or on the front and rear suspension should be performed on a platform hoist, over a pit or otherwise on the workshop floor.


When supporting the vehicle on a four point location system any component removal or use of tooling can dramatically move the centre of gravity to an imbalance situation.



Install

Front licence plate to front of vehicle.

Important: When installing a licence plate to the front of the vehicle it is important not to obscure the air intake. Position the licence plate lower than the air intake grille.

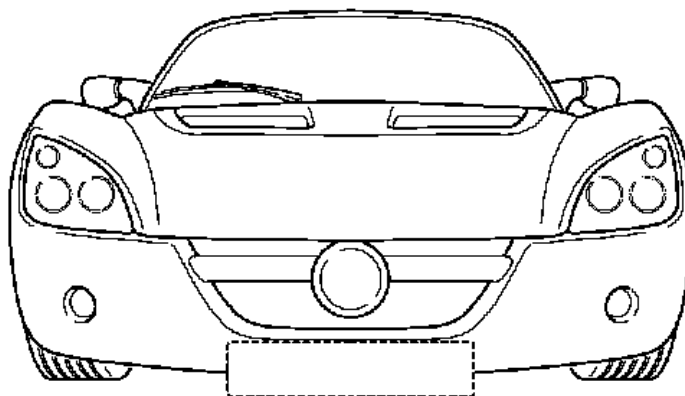

T 9739




Install

Rear licence plate to rear of vehicle.

Important:

When installing a licence plate to the rear of the vehicle be sure to mount it as high as possible. This is especially relevant for plastic licence plates that may be damaged by heat from the exhaust system.

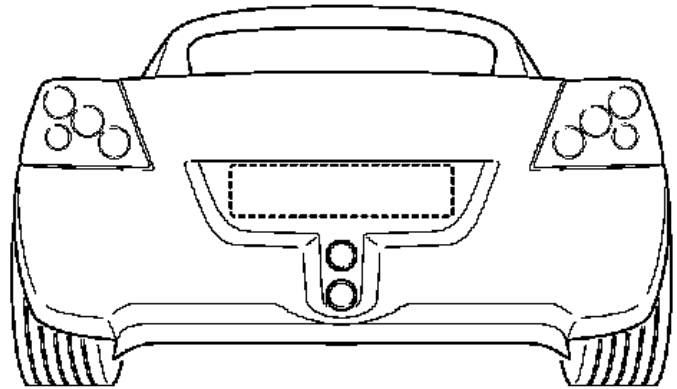

T 9740