


Window Regulator Mechanism, Door, Remove and Install

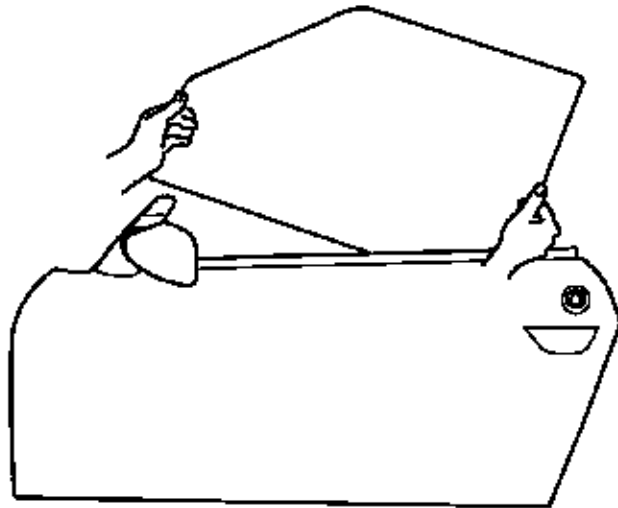

Remove

Door window from door – see operation "Door Window, Remove and Install".



T 9553


Window regulator mechanism from door – bolts, washers.



Install

Window regulator mechanism to door – bolts, washers.

Door window to door.

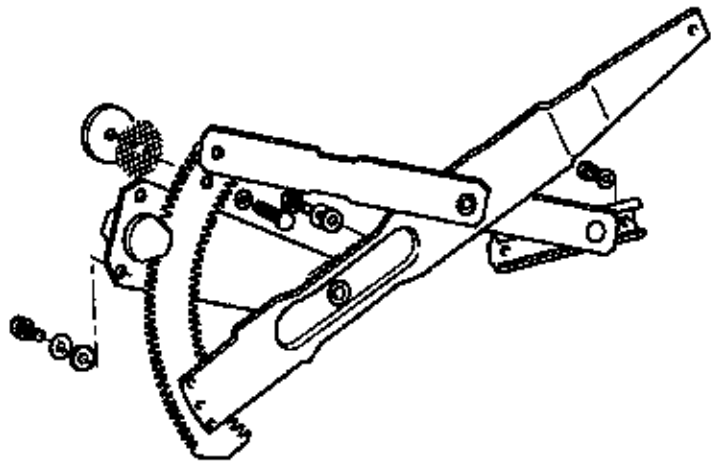

T 9554