

## External Handle, Door, Remove and Install




**Remove**

External handle from door – screws.



**Install**

External handle to door – screws.

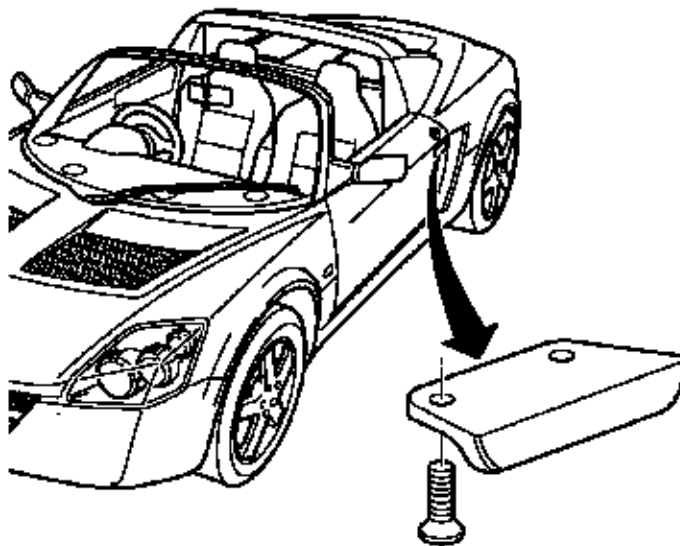

**T 9555**