

Bushes and Bearings, Door Hinges, Replace



Remove

Front clamshell from vehicle – see operation "Front Clamshell, Remove and Install" in group A.

Door from vehicle- see operation "Door, Remove and Install" in group A,

Bushes and bearings from door hinge.

Caution !

Do not lubricate bushes or bearings.




Install

Bearings and bushes to door hinge.

Door to vehicle.

Front clamshell to vehicle.

Hinge shown removed for clarity.

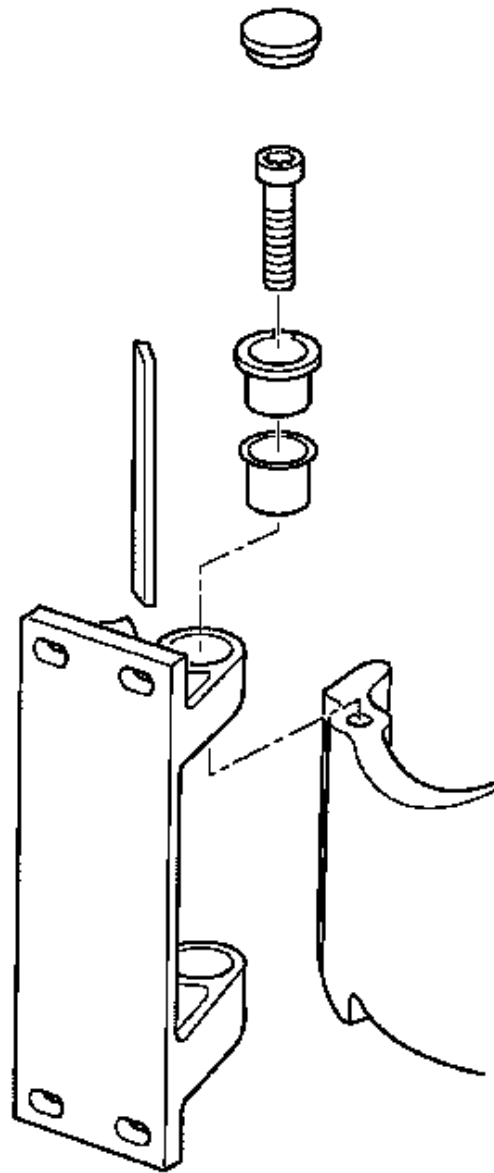

T 9558