

Tread Plate, Door, Remove and Install




Remove

Tread plate from door aperture – screws, clips.



Install

Tread plate to door aperture – clips, screws.

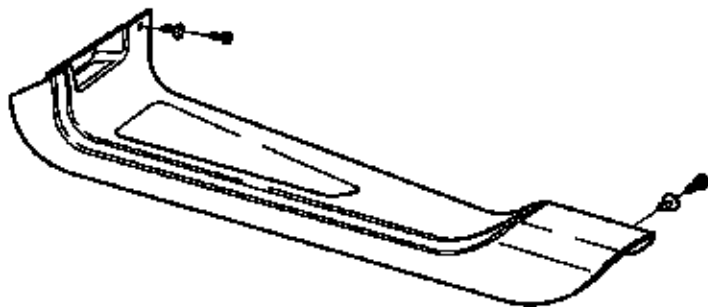

T 9560