

Seat Belt, Replace

Instructions that follow are for left seat belt; right seat belt is similar.




Remove

Soft top or hard top from vehicle – see Owner's Manual.


Seat belt from right seat – anchor bolt.

Right seat from floor – bolts.

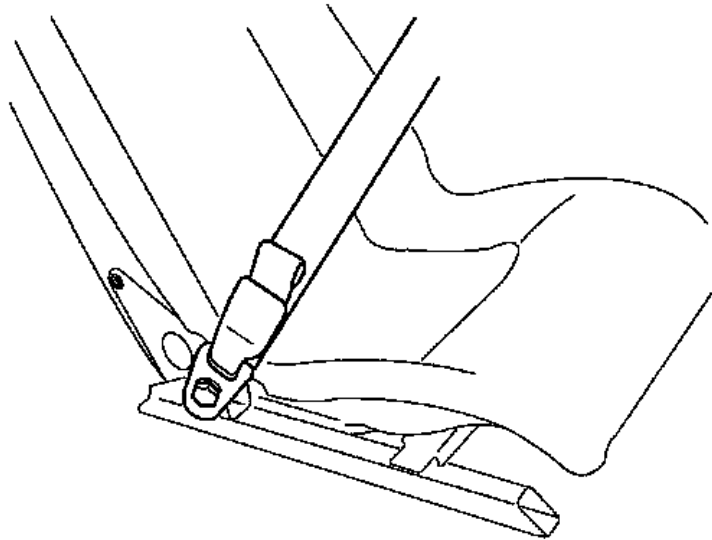

T 9567


Seat belt for right seat from roll bar – upper anchor bolt.

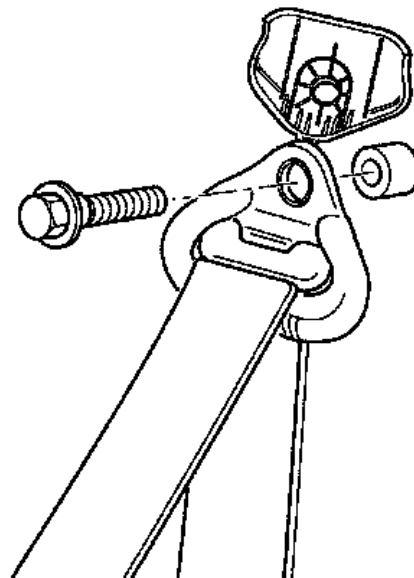


S 0918

Seat belt from left seat – anchor bolt.

Left seat from floor – bolts.

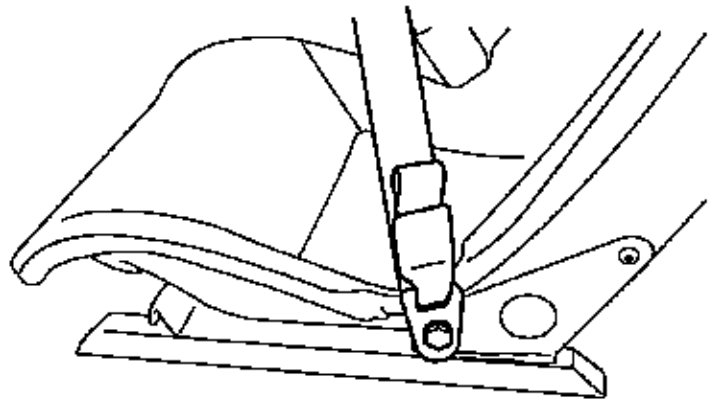**T 9569**


Seat belt for left seat from roll bar – upper anchor bolt.

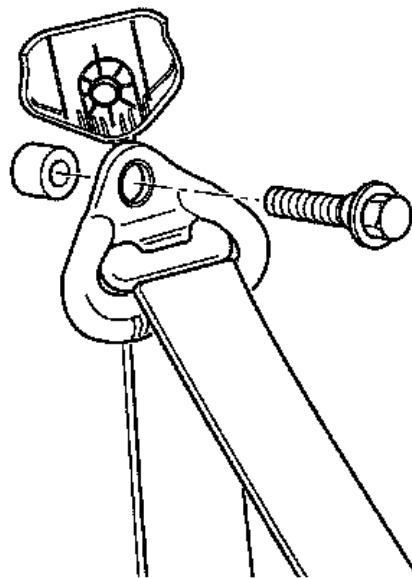**S 0919**

Loudspeakers from rear bulkhead trim –
loudspeaker covers, 6 screws.

Rear bulkhead trim – 6 screws.

Soundproof insulation from rear bulkhead.

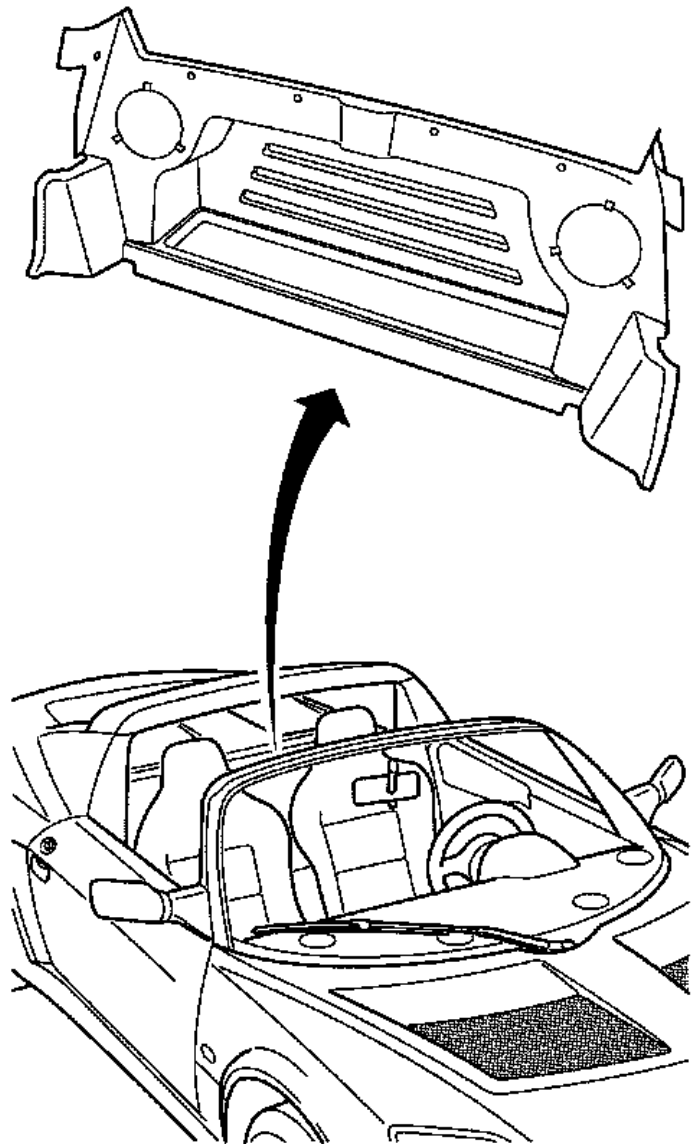

S 0931


Harness connector from left seat belt tensioner.

Left inertia reel assembly from roll bar – lower anchor bolt.

**Install**

Left inertia reel assembly to roll bar – lower anchor bolt.


Harness connector to left seat belt tensioner.

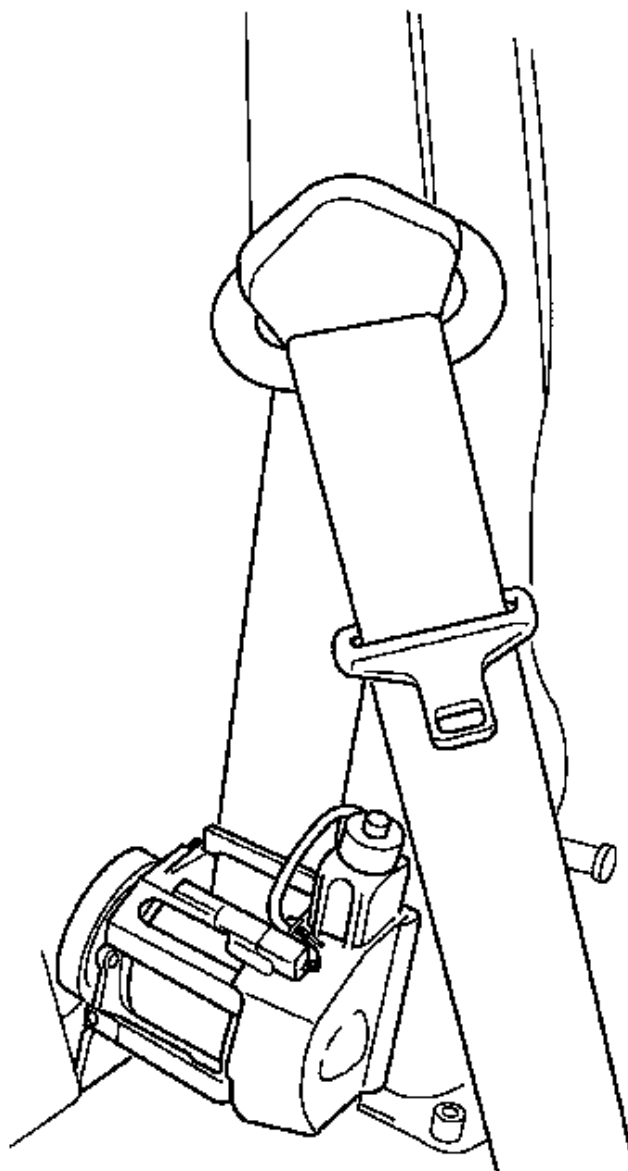**T 9572**

Soundproof insulation to rear bulkhead.


Rear bulkhead trim – 6 screws.

Loudspeakers to rear bulkhead trim – 6 screws, loudspeaker covers.

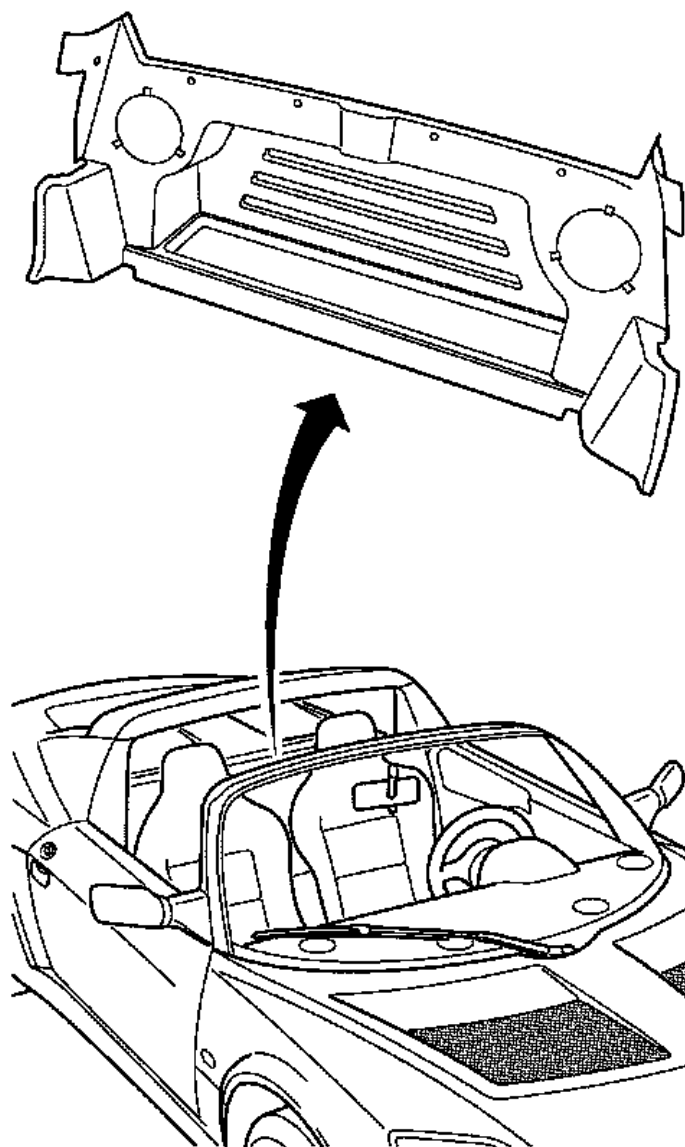

S 0931


Seat belt for left seat to roll bar – upper anchor bolt.

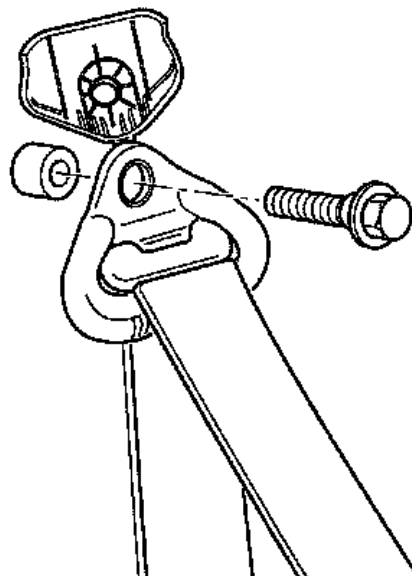

S 0919


Left seat to floor – bolts.

Seat belt to left seat – anchor bolt.

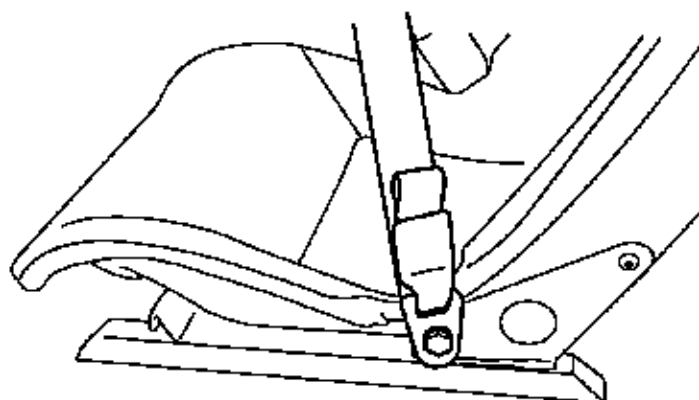

T 9569

Seat belt for right seat to roll bar – upper anchor bolt.

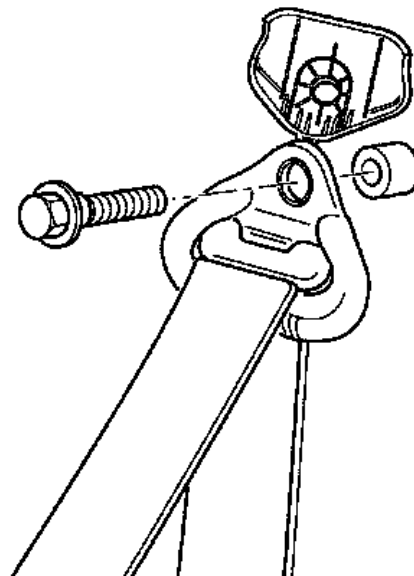


S 0918

Right seat to floor – bolts.

Seat belt to right seat – anchor bolt.

Soft top or hard top to vehicle – see Owner's Manual.

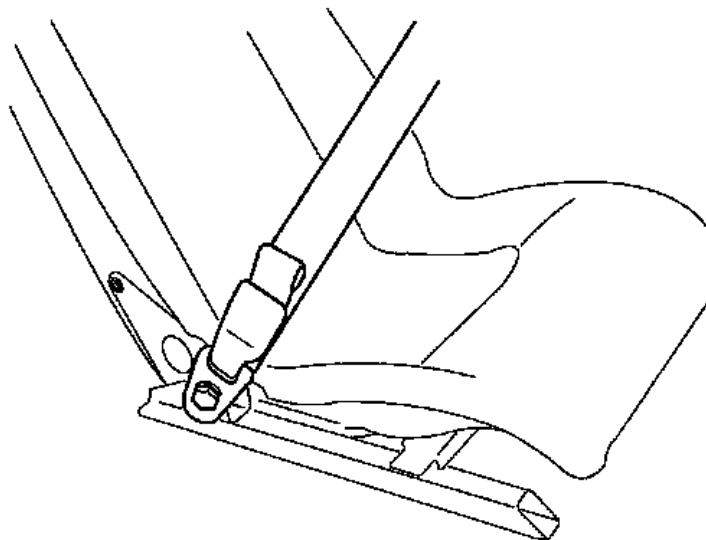

T 9567