


## Airbag Control Unit, Remove and Install



**Remove**

Instrument pad assembly from vehicle – see operation "Instrument Pad Assembly, Remove and Install".

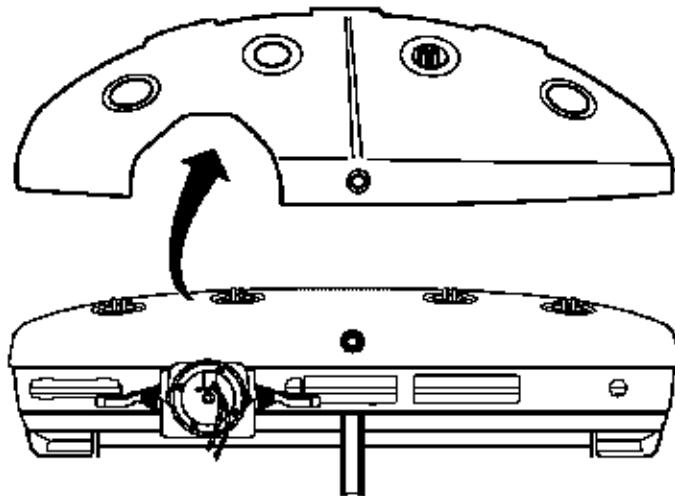

**T 9577**

Harness connector from airbag control unit.


Airbag control unit from support bracket – nuts and washers.




**Install**

Airbag control unit to support bracket – washers and nuts.

Harness connector to airbag control unit.

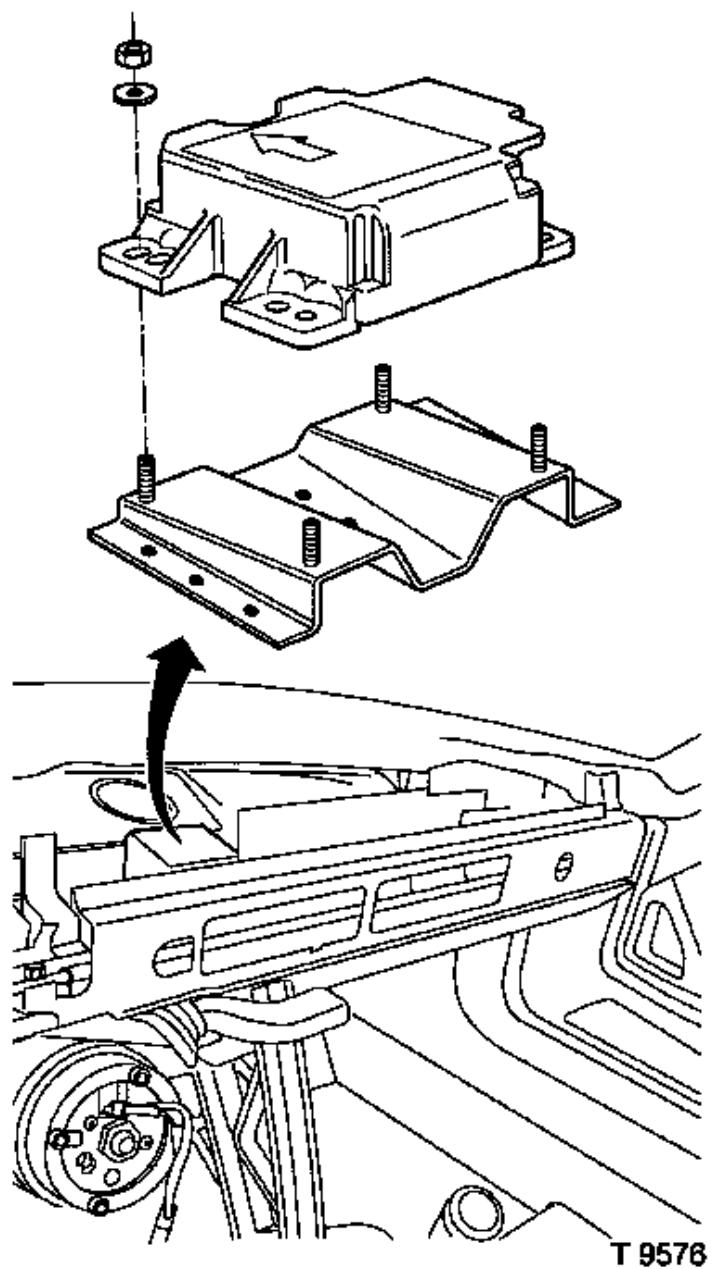

Instrument pad assembly to vehicle – see  
operation "Instrument Pad Assembly, Remove  
and Install".

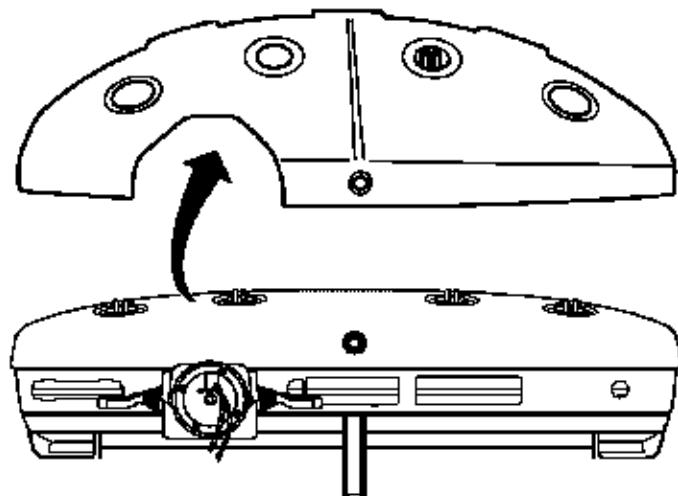**T 9577**