



## Covers, Steering Column, Replace

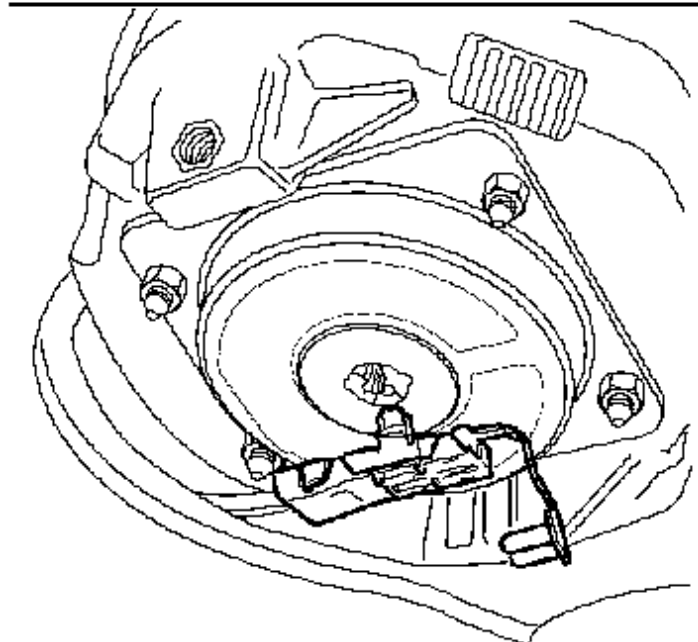

### Remove


1. Open bonnet
2. Remove windscreen wash reservoir from mounting bracket
3. Disconnect battery negative lead
  - Remove nut
4. Remove airbag assembly from steering wheel
  - Remove 2x bolt (1)
  - Release harness connector

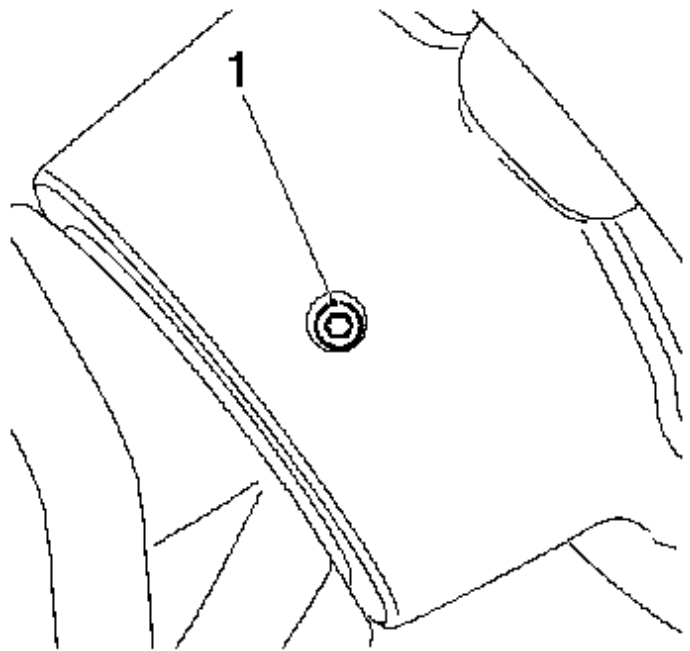

S 0002018

5. Disconnect harness connector for horn
6. Remove steering wheel from steering column
  - Remove 4x bolt

7. Remove upper cover from steering column
  - Remove 6x screw (1)

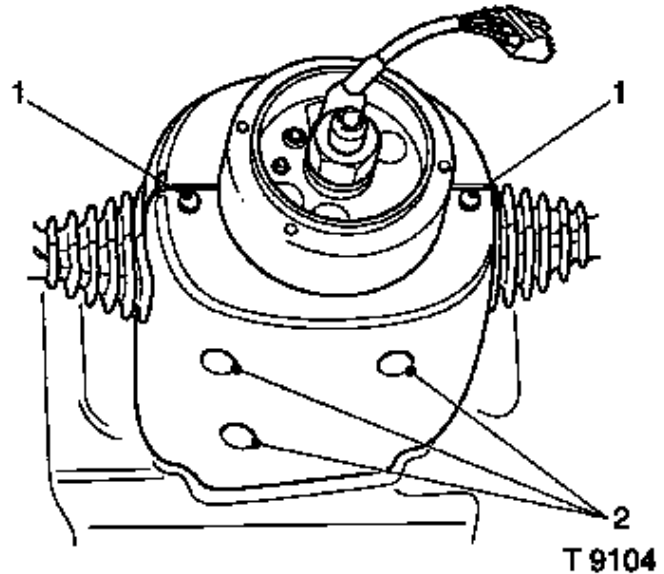

8. Remove lower cover from steering column
  - Remove 3x screw (2), remove clip
  - Release harness connector

**Install**

9. Install lower cover to steering column
  - Secure harness connector
  - Install 3x screw, install clip
10. Install upper cover to steering column
  - Install 6x screw
11. Install steering wheel to steering column
  - Install 4x bolt
12. Connect harness connector for horn
13. Install air bag assembly to steering wheel
  - Secure harness connector
  - Install 2x bolt
14. Connect battery negative lead
  - Install nut
15. Install windscreen wash reservoir to mounting bracket
16. Close bonnet
17. Program all volatile memories