
Soft Top, Remove and Install



Remove

- 1. Open windows and doors
- 2. Release latches at driver's side, then disengage soft top from brackets
 - Release 2x latch

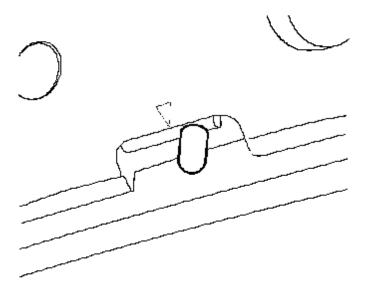


S 0002128

- 3. Roll soft top into centre of vehicle
- 4. Release latches at passenger's side, then disengage soft top from brackets
 - · Release 2x latch
- 5. Remove soft top, then place in protective bag
- 6. Remove spreader bars from vehicle
 - · Remove 2x spreader bar



Inetall

- 7. Install spreader bars to vehicle
 - Install 2x spreader bar
 Note: Ensure arrows on spreader bars point forward
- **8.** Install soft top to passenger's side, then secure locating pins into brackets
 - Secure 2x latch
- **9.** Roll soft top to driver's side, then secure locating pins into brackets
 - Secure 2x latch

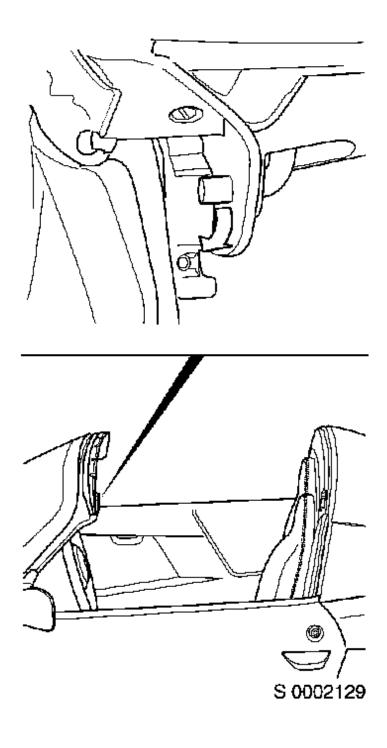

10. Close windows and doors