


Instrument Panel, Replace




Remove

1. Remove soft top/hardtop
2. Release electrical harness from wash pump
3. Release wash reservoir from support bracket, then position to one side

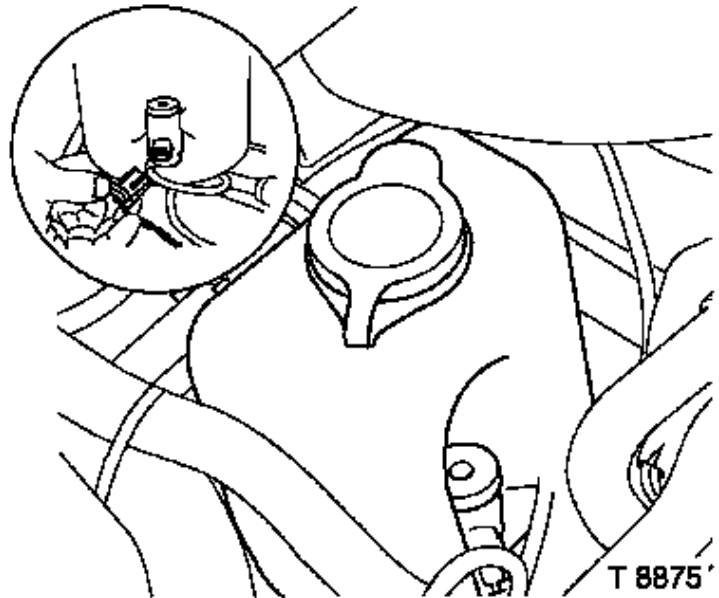


4. Disconnect battery
 - Disconnect negative lead
 - Release nut

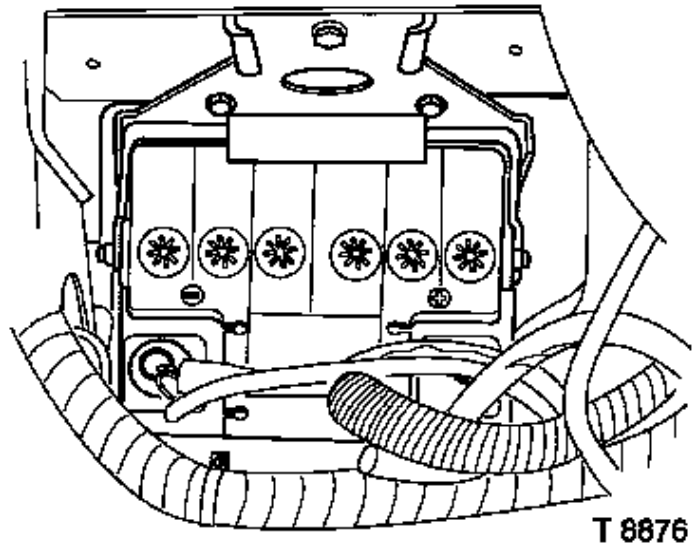


5. Remove 2x plastic insert from fascia panel
6. Remove radio from installation frame
 - Remove radio display fascia, then store in protective display case
 - Insert 2x extraction tool in radio

- Push each extraction tool outwards, then withdraw radio
- Disconnect aerial connector and harness connector

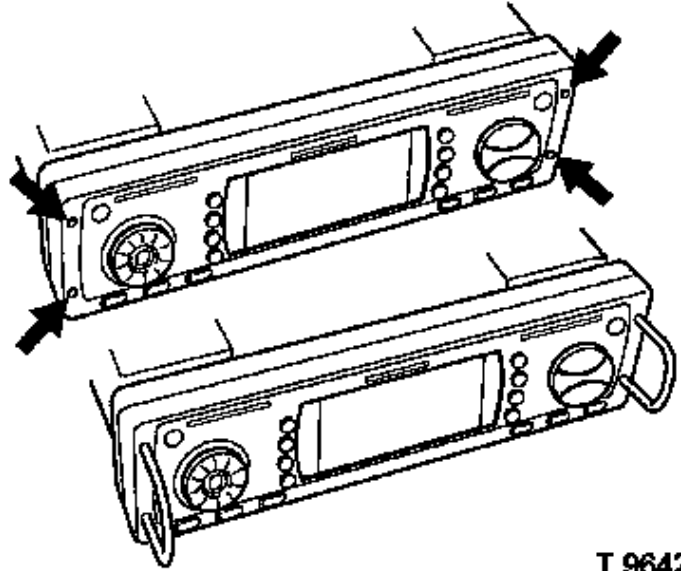**T 9642**


7. Remove installation frame for radio from instrument panel
 - Lightly press top and bottom of installation frame together

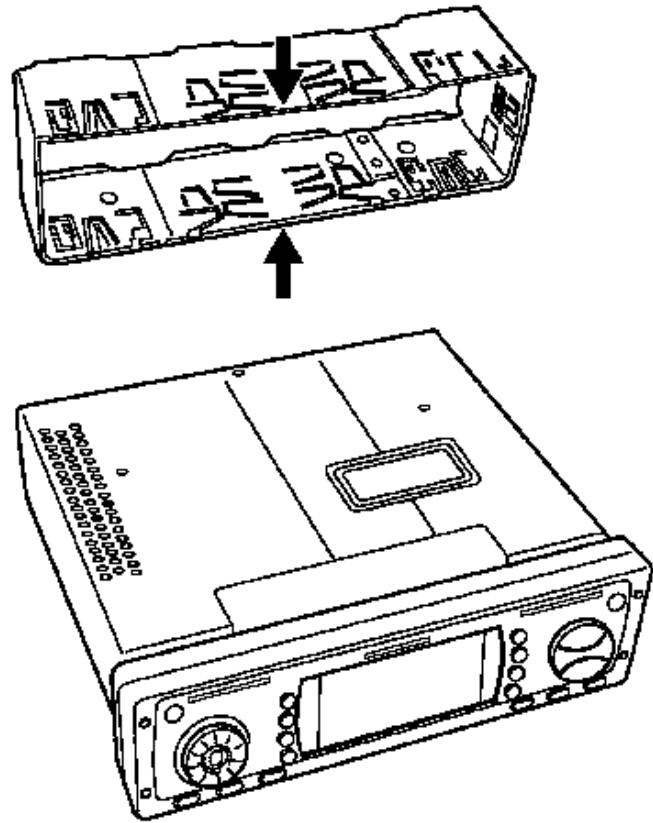


T 9643

Important: Observe all safety regulations for removal and storage of airbag unit


8. Remove driver's air bag unit from steering wheel
 - Remove 2x screw
 - Release harness connector

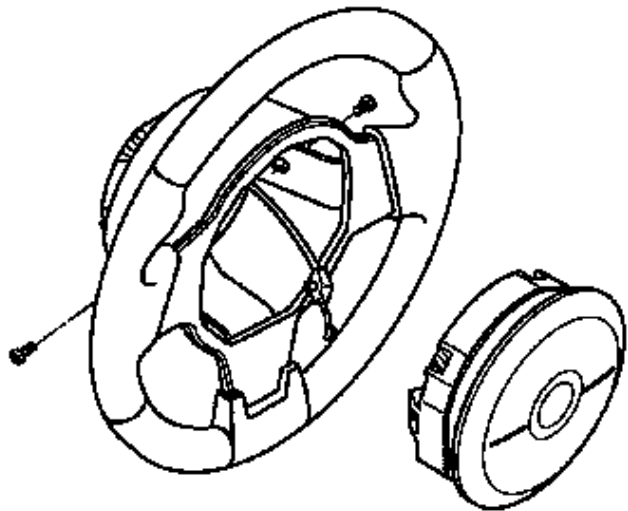**T 9390**


9. Disconnect horn switch from combination switch assembly
 - Release harness connector
10. Remove steering wheel from steering column
 - Remove 4x bolt

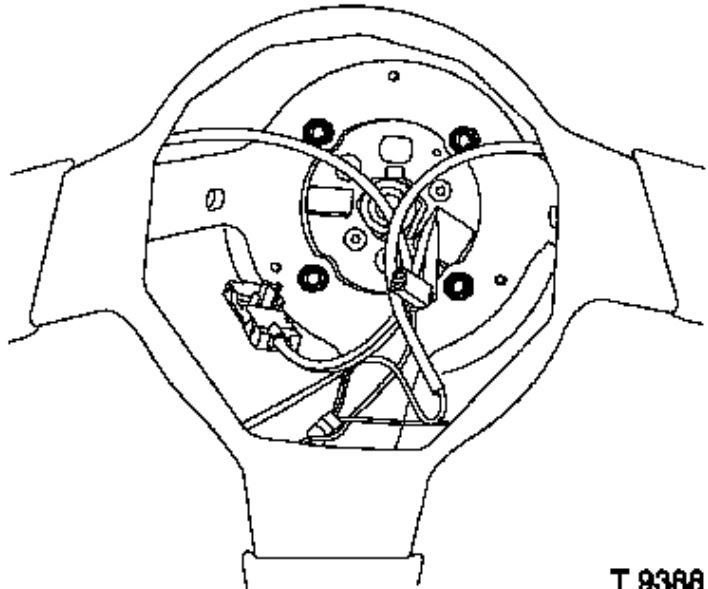**T 9366**

11. Remove upper shroud from steering column
 - Remove 6x screw (1)
12. Remove lower shroud from steering column
 - Remove 3x screw (2), clip, harness connector
 - Disconnect trip switch

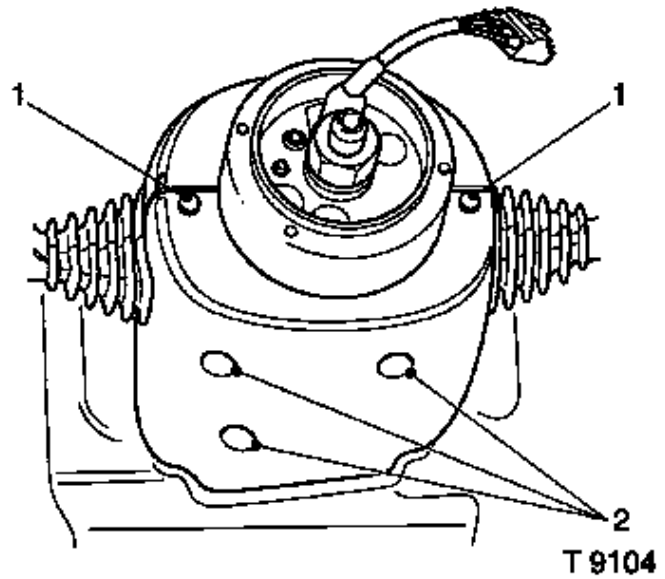


13. Remove instrument panel housing
 - Remove 2x bolt, 2x washer, harness connector
14. Remove lighting switch assembly from instrument panel
 - Release 4x retainer (arrowed)
 - Disconnect 5x harness connector

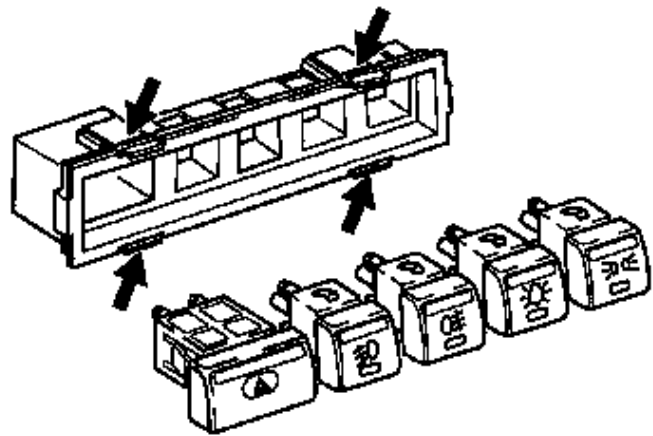

T 9103

15. Remove top fascia from instrument panel
 - Disconnect harness connector from starter switch
 - Remove 4x screw
 - Release harness connector

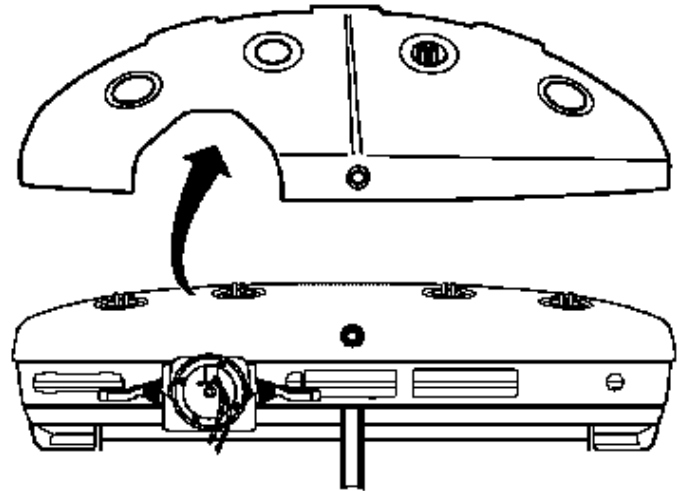

T 9577

16. Disconnect 2x control cable from heater control unit
 - Release clamp
 - Remove 2x screw
17. Disconnect electrical harness from heater control unit
 - Release 4x electrical connector
18. Release heater control unit from instrument panel
 - Remove 4x screw, 4x washer, 4x nut
19. Release demist duct from top fascia
 - Remove 20x screw
20. Remove 2x fascia panel from instrument panel
 - Release 2x clip
21. Remove instrument centre panel extrusion
 - Remove 4x bolt, 4x washer

**Install**

22. Install instrument centre panel extrusion
 - Install 4x washer, 4x bolt
23. Install 2x fascia panel to instrument panel
 - Secure 2x clip
24. Connect demist duct to top fascia
 - Install 20x screw
25. Install heater control unit to instrument panel
 - Install 4x washer, 4x screw, 4x nut
26. Connect 2x control cable to heater control unit
 - Install clamp
 - Tighten 2x screw
27. Connect demist duct to top fascia

- Install 20x screw
28. Install top fascia to instrument panel
 - Install 4x screw
 - Install harness connector
 - Connect harness connector to starter switch
 29. Install lighting switch assembly to instrument panel
 - Connect 5x electrical connector
 30. Install instrument panel housing
 31. Install lower shroud to steering column
 - Connect trip switch
 - Install harness connector, clip, 3x screw
 32. Install upper shroud to steering column
 - Install 6x screw
 33. Install steering wheel to steering column
 - Tighten 4x bolt
 34. Connect horn switch to combination switch assembly
 35. Install driver's air bag unit to steering wheel
 - Connect harness connector to airbag unit
 - Install 2x screw
 36. Install installation frame for radio to instrument panel
 37. Install radio to installation frame
 - Connect aerial connector and harness connector
 - Install radio display fascia
 38. Install 2x plastic insert to fascia panel
 39. Connect battery
 - Connect negative lead
 - Secure nut
 40. Secure wash reservoir to support bracket
 41. Connect harness connector to wash pump
 42. Reprogram all volatile memories
 43. Install soft top/hardtop