



## Cantrail Bracket, Replace

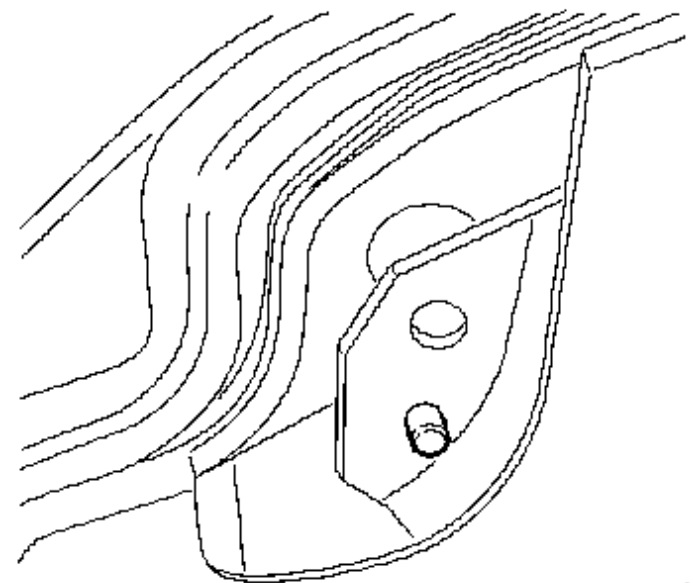

Remove

1. Remove rear cantrail bracket from roll bar
  - Remove bolt


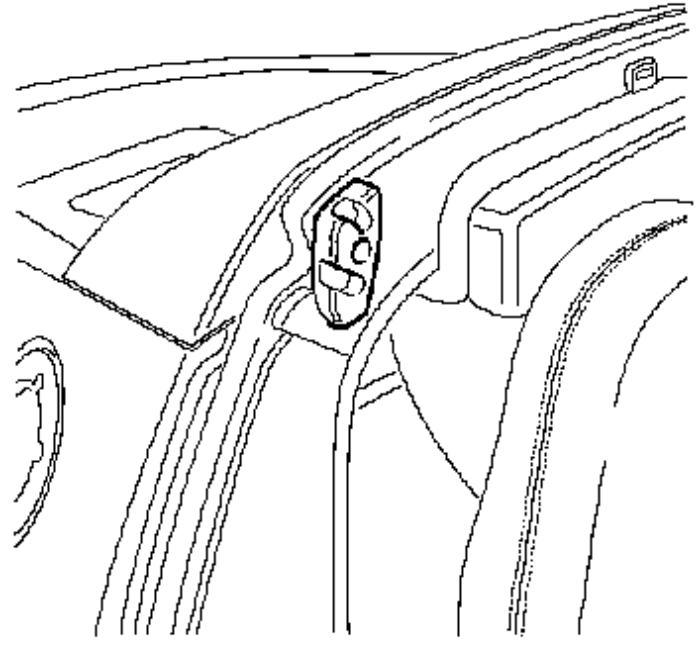


S 0002505



Install

2. Install rear cantrail bracket to roll bar
  - Ensure dowel pin is installed in roll bar
  - Install bolt
    - Apply locking compound to bolt thread

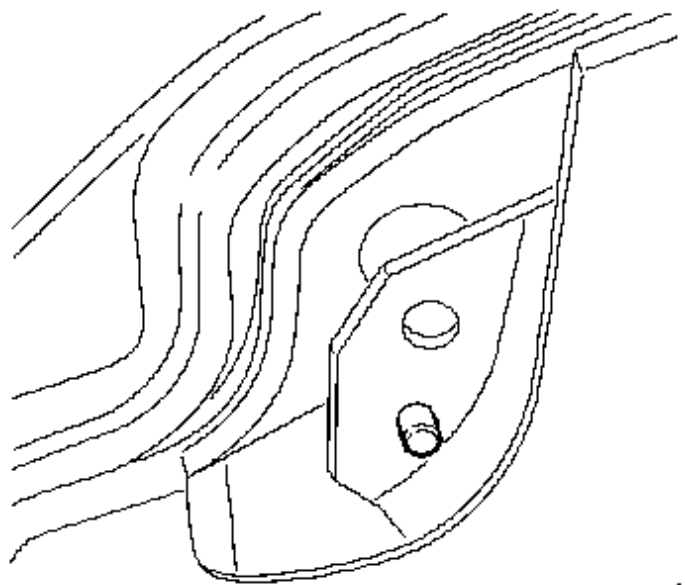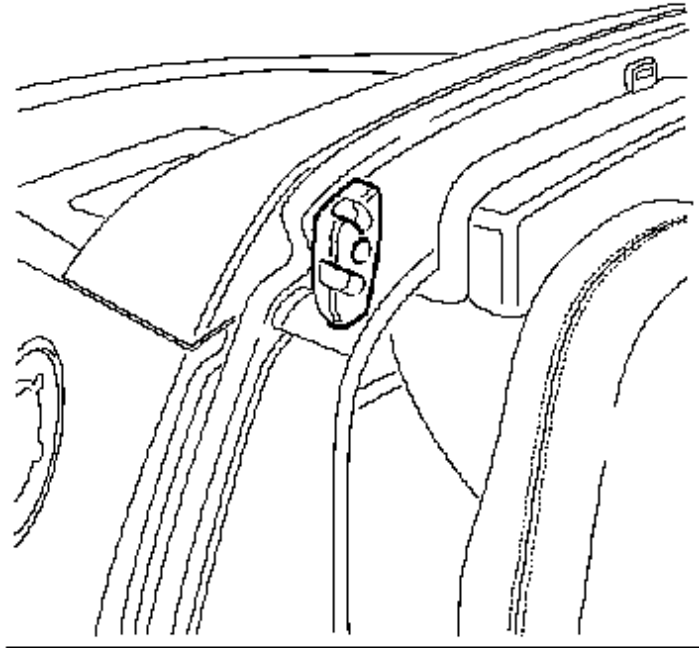

S 0002505

3. Front cantrail brackets are fixed and not serviceable