

## **Load Compartment**

The load compartment is located at the rear of the vehicle, behind the engine compartment. Opening the engine cover provides access to the load compartment.