


Door Window, Remove and Install



Remove

Door trim from door – see operation "Door Trim, Remove and Install".

Water vapour barrier from door.

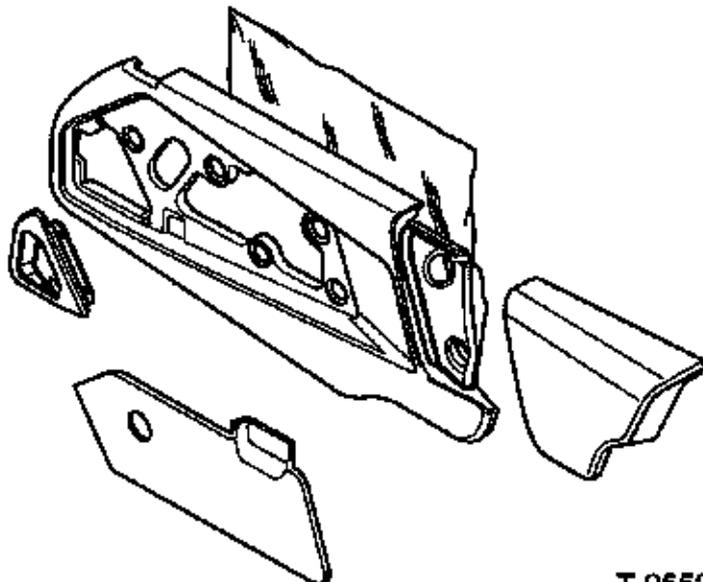


T 9552

Inner and outer waist seals from door.

Internal handle from door – screws.

Door window from door.

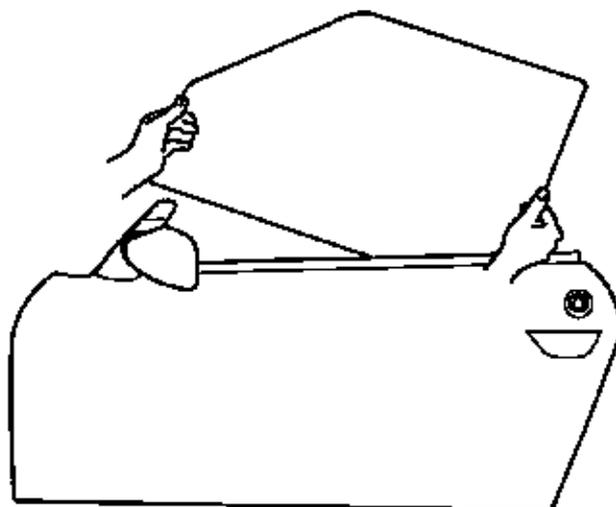

T 9553




Install

Door window to door and adjust.

Internal handle to door – screws.


Inner and outer waist seals to door.

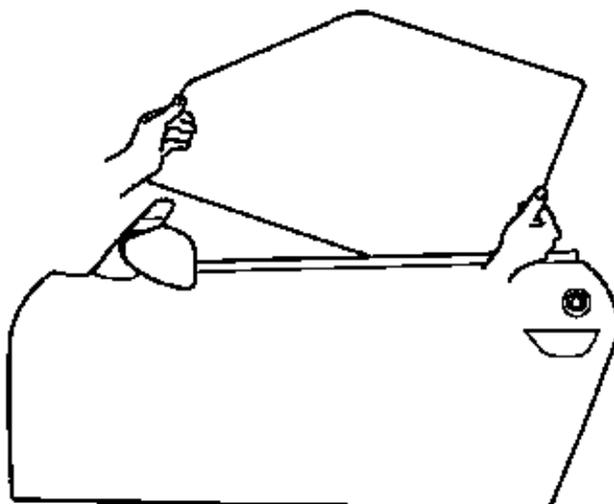

T 9553

Water vapour barrier to door.

Door trim to door – see operation "Door Trim, Remove and Install".

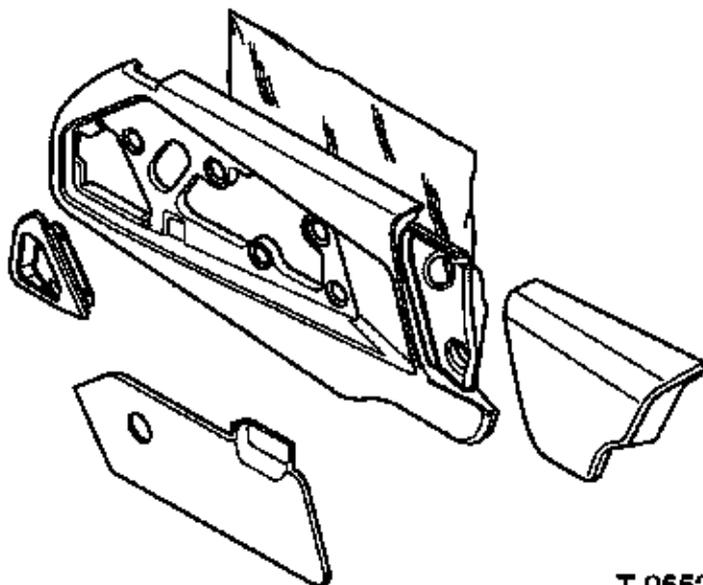

T 9552