

Lock Cylinder, Door, Remove and Install



Remove

Door window from door – see operation "Door Window, Remove and Install".

Lock cylinder from door – bolts and washers.

Linkage from lock cylinder.




Install

Linkage to lock cylinder.

Lock cylinder to door – bolts and washers.

Door window to door.

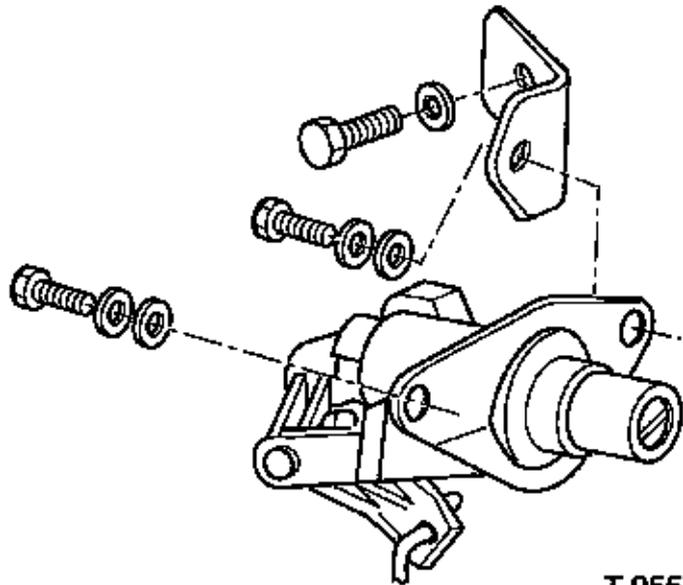

T 9557