

## Mat, Load Compartment, Remove and Install




**Remove**

Mat from load compartment – release from velcro fastening.



**Install**

Mat to load compartment – attach to velcro fastening.

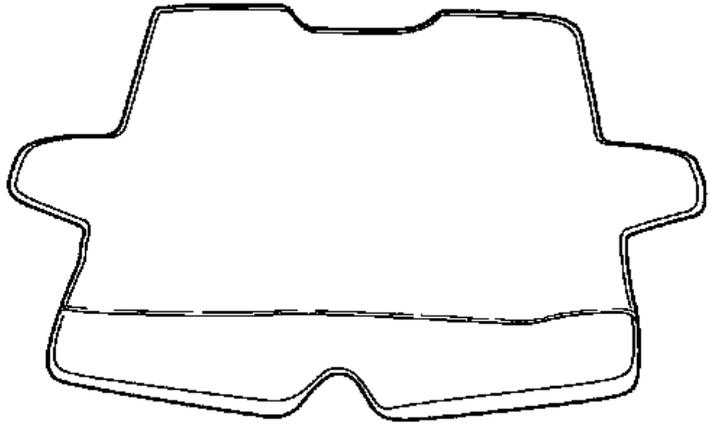

**S 0896**