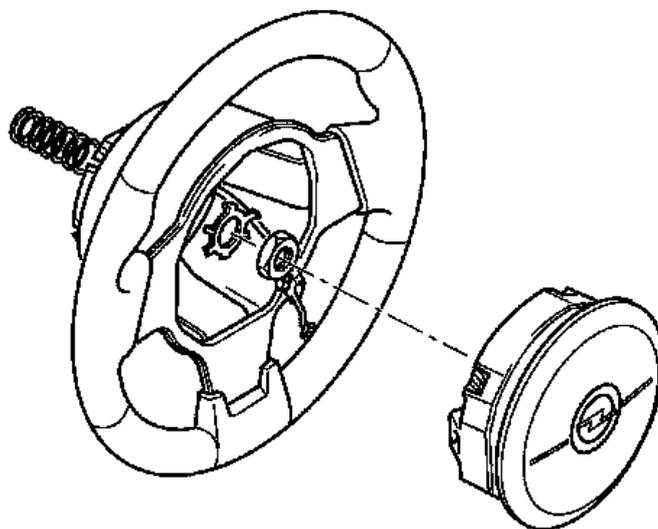


Instrument Housing, Remove and Install



Remove

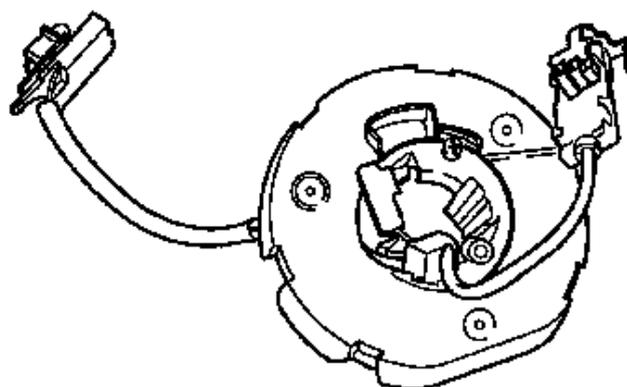
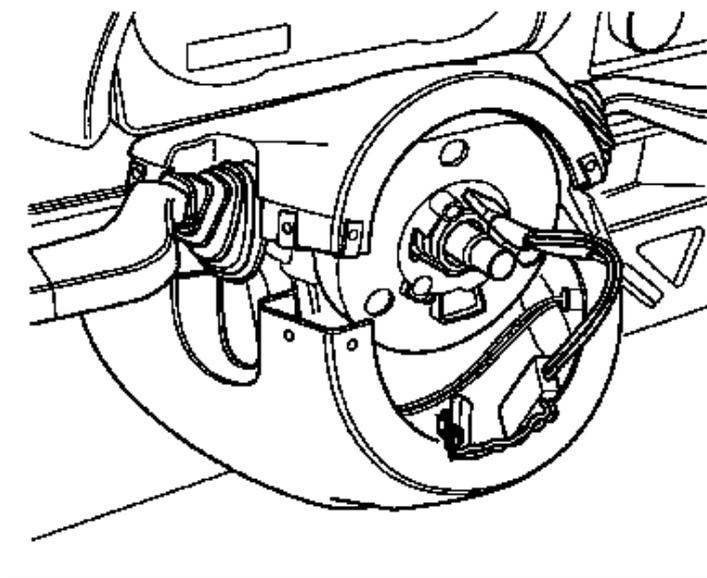
Steering wheel from steering column – see operation "Steering Wheel, Remove and Install" in group M.



T 9563

Upper and lower shrouds from steering column – 10 screws, harness connector from trip odometer switch on lower shroud.

Airbag contact unit from steering column – harness connector, cable tie.

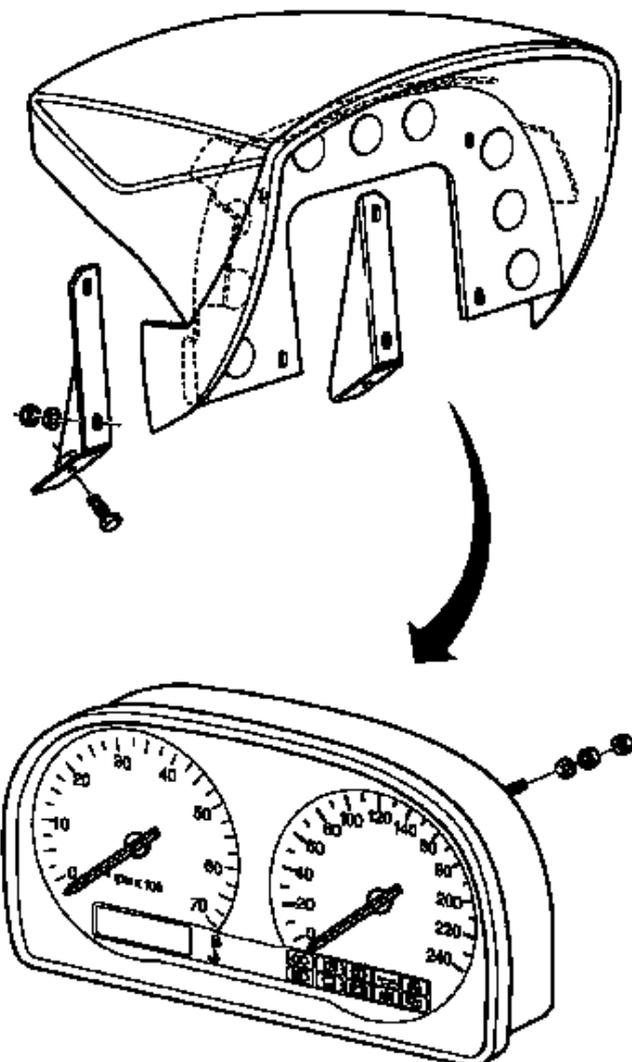
**S 0920**

Instrument housing and cover assembly from vehicle – bolts; disconnect harness connector.

Instrument housing from cover – nuts, washers.

Instrument housing to cover – nuts, washers.

Instrument housing and cover assembly to vehicle – bolts; connect harness connector.

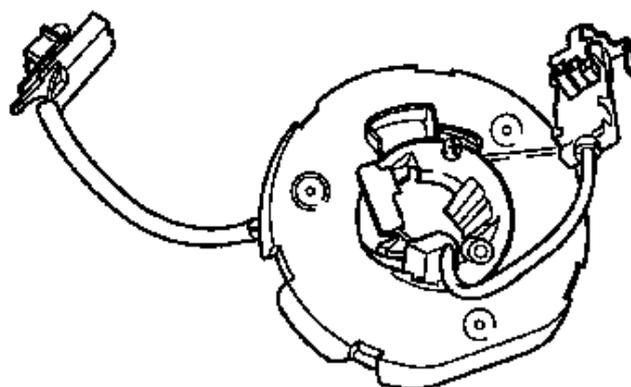
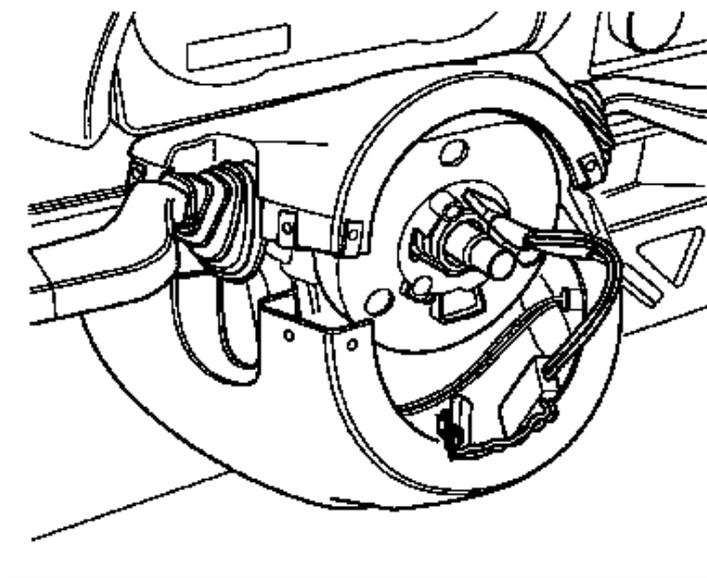


T 9585

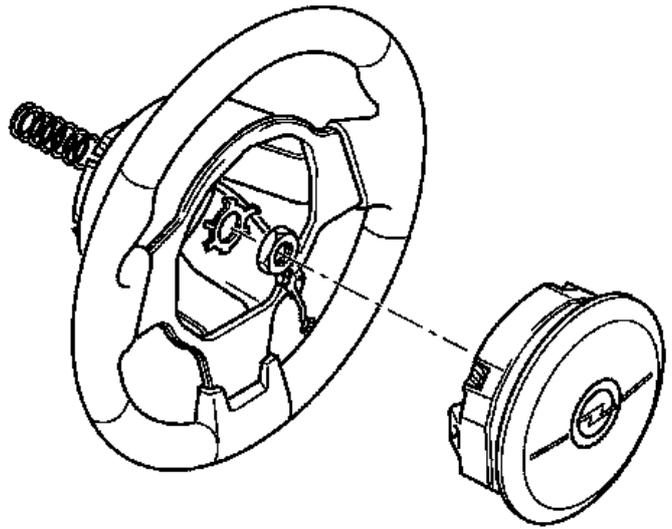
**Install**

Airbag contact unit to steering column –
harness connector, cable tie.

Upper and lower shrouds to steering column –
harness connector to trip odometer switch on
lower shroud, 10 screws.

**S 0920**

Steering wheel to steering column – see operation "Steering Wheel, Remove and Install" in group M.



T 9563