

## Seat Belt Buckle, Remove and Install



**Remove**

Seat from floor – see operation "Seat, Remove and Install".


Seat belt buckle from seat – screw.



**Install**

Seat belt buckle to seat – screw.

Seat to floor.

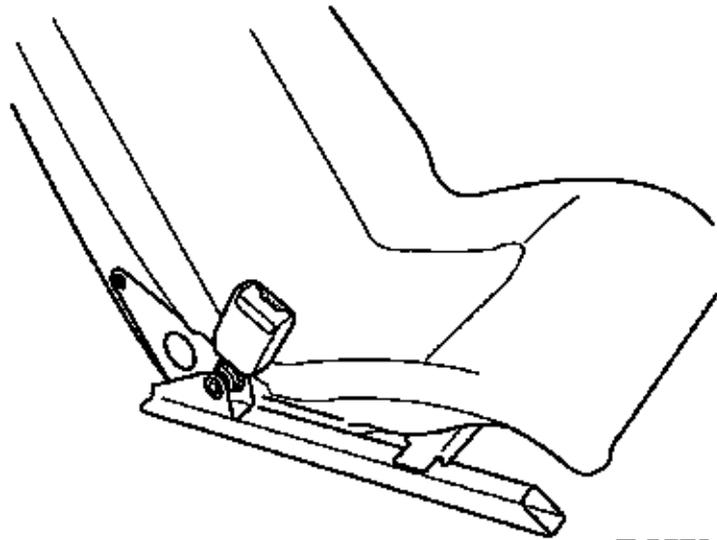

**T 9573**