

Seat, Remove and Install



Remove

Soft top or hard top from vehicle – see Owner's Manual.

Seat belt from seat – anchor bolt.

Seat from floor – bolts.




Install

Seat to floor – bolts.

Seat belt to seat – anchor bolt.

Soft top or hard top to vehicle.

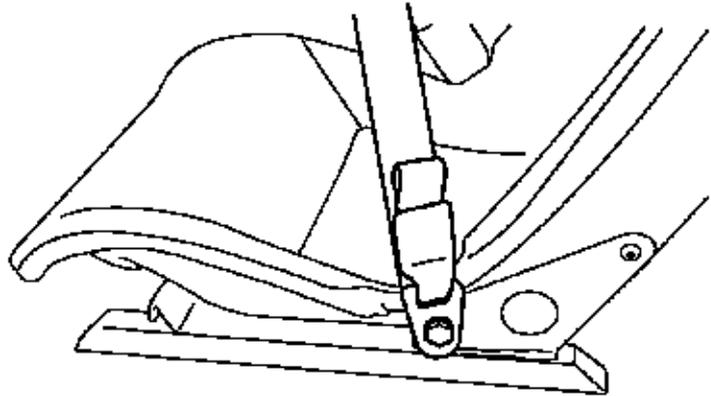

T 9569