

Airbag Unit, Driver's, Remove and Install



Remove

Harness connector from airbag unit.


Airbag unit from steering wheel – screws.



Install

Airbag unit to steering wheel – screws.

Harness connector to airbag unit.

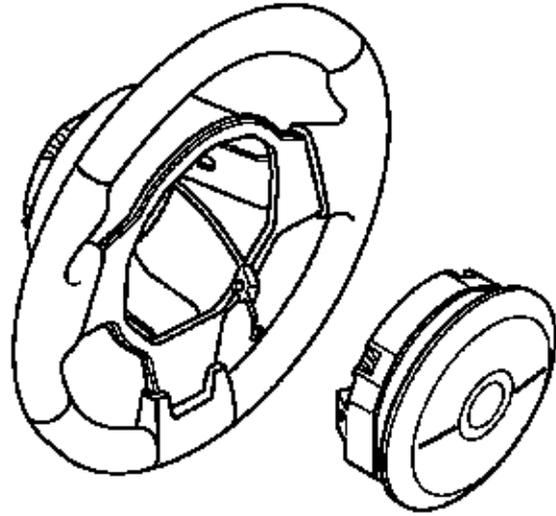

T 9574